



CPT160 & CPT180 Series Toasters

Cuisinart®

Congratulations on your purchase of the Cuisinart Toaster.


For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products and for recipe ideas visit our website www.cuisinart.co.uk

Contents

Product Control Guide	4
Important Safety Cautions	5
Instructions for Use	
Before First Use	9
Toasting	9
Defrost Setting	10
Reheat Setting	10
Bagel Setting	10
Toasting – Hints & Tips	11
Crumb Trays	11
Cleaning & Maintenance	12
Guarantee.....	12
UK After Sales Service	14

Product Control Guide

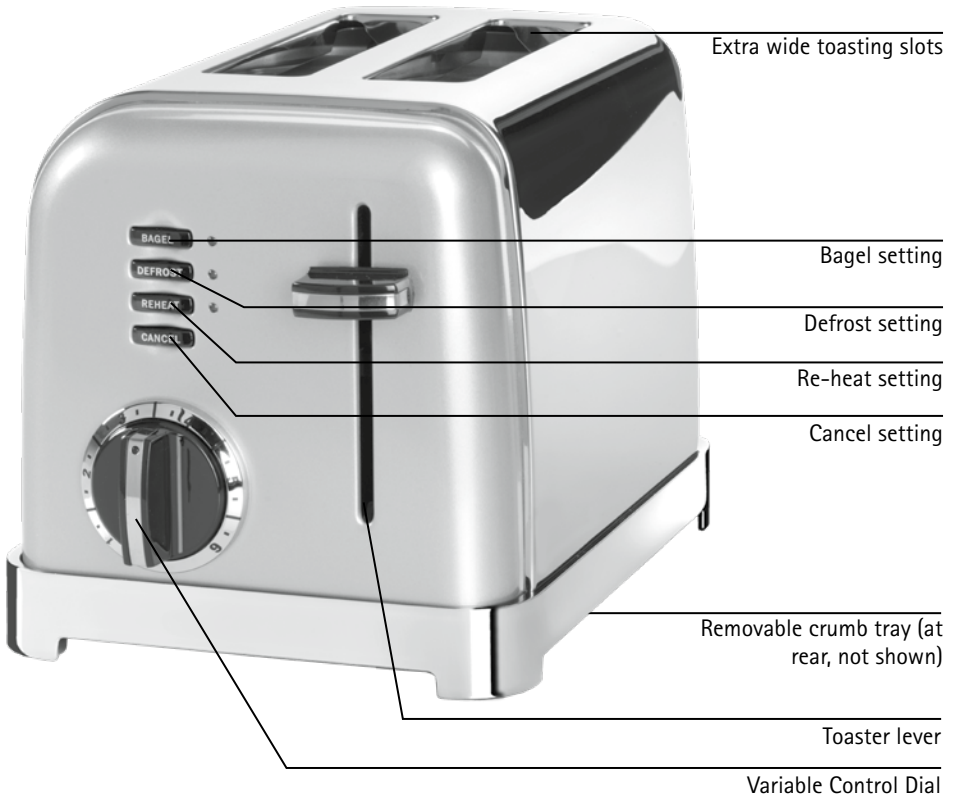

Important Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book. There is a risk of injury if the product is misused.

IMPORTANT SAFEGUARDS

CAUTION: BURN HAZARD



- **WARNING:** very hot surfaces. The temperature of accessible surfaces may be high when the appliance is in use.
- **DO NOT TOUCH** hot surfaces as possible injury could occur. Never put your hands inside the appliance.
- **THIS IS AN ATTENDED APPLIANCE.** Do not leave unattended during use, unplug after each use. Never leave the appliance unattended when switched on or plugged in.
- Toasted bread and bread products can burn, do not use the toaster near or under combustible materials like curtains or under kitchen wall cabinets.
- Never attempt to dislodge food when the toaster is plugged into the mains outlet.
- Metal utensils, such as knives or sharp objects must not be inserted in the toaster.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should always be supervised to ensure that they do not play with this appliance.
- Not for use by children. Keep the appliance and its supply cord out of reach of children during and after use.

- This appliance is for indoor, domestic use only and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by customers in hotels, motels and other residential type environments; bed and breakfast type establishments.
- Do not use the appliance if the supply cord is damaged. In the event of supply cord damage, discontinue use immediately. If the supply cord is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not wrap the supply cord around the main body of the appliance during or after use.
- Do not leave the supply cord hanging over the edge of a kitchen table or worktop.
- Do not allow the supply cord to come into contact with sources of heat.
- As the outer surfaces may get hot when the appliance is in use, take care not to allow the appliance surfaces to come into contact with other heat sensitive surfaces.
- Always unplug the appliance from the mains outlet and allow to cool before cleaning.

ELECTRICAL SAFETY

- Always ensure the voltage to be used corresponds with the voltage on the appliance, this is indicated on the bottom of the housing.
- The appliance is not intended to be operated by means of external timer or separate remote-control system.
- Always disconnect the appliance from the electric supply if it is left unattended and before assembling, disassembling or cleaning.
- Never pull the plug out of the mains socket by the supply cord.
- Always ensure that your hands are dry before touching the supply cord or removing the plug from the mains socket.

GENERAL SAFETY

- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service section" for further information).
- Do not use the appliance for anything other than its intended use.
- Do not touch hot surfaces whilst the appliance is switched on and during cooling time.
- Position the Toaster on a stable, level, heat resistant surface near a power socket.
- When lifting the appliance ensure you fully support from underneath.
- Do not place anything on top of the appliance while it is operating or while it is hot.
- Do not use accessories or attachments with this appliance other than those recommended by Cuisinart.
- Do not place the appliance on or near a hot gas or electric burner or place in a heated oven.
- Never leave the appliance unattended when switched on or plugged in.
- Periodically check all parts before use. If any part is damaged DO NOT USE.
- To avoid injury or possible fire, do not cover the appliance when in use.
- To protect against fire, electric shock or personal injury, do not immerse the housing base, cord or plug in water or other liquids or place in a dishwasher.
- Switch off and unplug the appliance after use.
- Unplug from the mains when not in use and before cleaning. Allow to cool completely before cleaning the appliance and storing.
- Wipe the outside of the toaster with a clean damp cloth, then dry it carefully. To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place. Do not use the toaster without the crumb collector. To remove pieces remaining in the toaster, turn it upside down and shake gently to cause the pieces to drop. Never insert a knife or any sharp object in the toaster as this could cause damage.

The toasting carriage is designed to be extra deep to accommodate taller breads.

Please take extra care when removing smaller breads/bagels/crumpets.

Please be aware of hot surfaces around the bread slots when in use.

If bread becomes jammed in the bread slots, please switch off the appliance from the mains power supply, allow the appliance to cool and remove the bread.

Please note the area around the bread slots and toast may be hot to touch at the end of the toasting cycle.



WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see "U.K. After Sales Service" section).

Disposing of electrical and electronic appliances at the end-of-life



This symbol on the product or on the packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

Instructions For Use

Before First Use

Remove all packaging from the product and unwind the power cord.

Check that the crumb tray is in place.

Check that the toaster slots are empty.

Plug the power cord into the mains socket and switch on.

Before first use, we recommend that you set the browning level to 6 using the control dial and operate the toaster without any bread to burn off any dust from the new elements. There may be a distinctive smell – this is quite normal.

Toasting

Your toaster has been specially designed with an extra wide, extra deep toasting carriage to accommodate and evenly toast most types of breads. Ensure the toaster is plugged into the mains socket and the toasting lever is in the up position.

On the 4 slice toasters the pairs of toasting slots are independently controlled, so you can select different browning settings for each pair of slots.

1. Select the browning level using the control dial (1 is the lightest and 6 is the darkest setting). You can select a position part way between the settings for total control.

NB. Toasting is a combination of cooking and drying of the bread, therefore differences in moisture levels from one bread to another can lead to varying toasting results.

2. Insert slice(s) of bread.

NB. Never force foods into the toasting slot. Foods should fit freely between the guides.

3. Press the toasting lever(s) down until it locks into position. It will only lock into position if the toaster is connected to the mains socket.

When the cycle is complete, the toaster will automatically raise the bread. The lever can be raised further to allow you to remove smaller breads e.g. bagels, crumpets more easily.

If you wish to stop the cycle before it has finished, simply press the 'Cancel' button(s).

4. After use, unplug the toaster from the mains socket.

Defrost Setting

The Defrost setting is designed to first defrost and then toast the bread in one automatic cycle.

Ensure the toaster is plugged into the mains socket and the toasting lever is in the up position.

Select the browning level using the control dial.

Press the lever down until it locks into position.

Press the 'Defrost' button(s). The red light indicates the feature is activated.

NB. The button can only be activated once the lever is down.

When the cycle is complete, the toaster will automatically raise the bread.

Reheat Setting

The reheat setting allows you to reheat your toast without further browning or toasting.

Ensure the toaster is plugged into the mains socket and the toasting lever is in the up position.

Insert slice(s) of toast. Only reheat plain, unbuttered toast.

Press the lever down until it locks into position. It is not necessary to adjust the browning control.

Press the 'Reheat' button(s). The red light indicates the feature is activated.

NB. The button can only be activated once the lever is down.

The Reheat cycle lasts approximately 30 seconds. When the cycle is complete, the toaster will automatically raise the bread.

Bagel Setting

The Bagel setting adds extra time to the toasting cycle to accommodate the thickness of bagels, rolls, muffins and thicker breads.

Slice your bagel into 2 equal halves. Place each half into one of the slots.

Select the browning level using the control dial.

Press the lever down until it locks into position.

Press the 'Bagel' button(s). The red light indicates the feature is activated.

NB. The button can only be activated once the lever is down.

NB. If you wish to defrost bagels, ensure the defrost button is also pressed. This will extend the toasting cycle further.

NB. If you wish to reheat bagels, ensure the bagel button is pressed first, followed by the reheat button.

When the cycle is complete, the toaster will automatically raise the bagel(s).

Toasting – Hints & Tips

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces will require a higher toast setting.
- Thick cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can begin. Very thick pieces may even require 2 cycles.
- Sweet bread products e.g. tea cakes, fruit loaf etc. brown more quickly than ordinary bread, so it is best to use a lower setting.
- When toasting raisin or other fruit breads, remove any loose raisins etc. from the surface of the bread before toasting. This will help to prevent fruit pieces from falling into the toaster or sticking to the guide wires in the slot.
- If you are toasting a single slice of bread, set the browning setting at a lower level than normal. The toaster is designed to heat the whole toasting chamber, so by lowering the heat for a single slice, you will not over toast.
- It is possible to use the toaster for toasting pastries. You should only use pastries which are specifically designed for use with a toasting, and you should always follow the instructions provided by the manufacturer of the pastry. Take extra care when toasting pastries. The filling can become very hot long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

Crumb Trays

The toaster is equipped with removable crumb trays to collect crumbs during toasting. We recommend that the crumb trays are removed and emptied on a regular basis.

To empty, locate the trays which are fitted in the base of the toaster. They can be accessed from the rear of the toaster.

Pull the cover on each tray, and the tray(s) will slide out. Discard the crumbs and replace by sliding back into position. Never operate the toaster without the crumb tray in place.

Cleaning & Maintenance

Always disconnect the toaster from the mains immediately after use and allow to cool completely before cleaning.

Do not immerse the appliance in water or any other liquid or place in a dishwasher.

Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Always apply any cleaning agent to a cloth, not to the toaster.

To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake.

Never wrap the cord around the outside of the toaster.

IMPORTANT:

Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard.

Guarantee

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non-domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email support@cuisinart.co.uk for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

www.cuisinart.co.uk