



**One Cup Grind & Brew Coffee Maker
DGB2U**

Cuisinart®

Congratulations on your purchase of the Cuisinart One Cup Grind & Brew Coffee Maker.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long-life, and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products and for recipe ideas visit our website www.cuisinart.co.uk

Contents

Product Description	5
Important Safety Cautions	6
Using The Cuisinart Grind & Brew Coffee Machine.....	9
Initial Cleaning.....	9
Using the Control Panel	10
Making Coffee With Whole Beans	11
Cleaning & Maintenance	13
UK Guarantee.....	16
UK After Sales Service	18

Product Description



Brew Head Lever

Control Panel

Bean Hopper

Brew Head

Removable Drip Tray

Brew Chamber (not shown)

HomeBarista™ Storage Compartment (not shown)

Conical Burr Mill (not shown)

Water Tank with Water Level Indicator (not shown)

Coffee Scoop (not shown)



HomeBarista™ Reusable Filter Basket



HomeBarista™ Reusable Filter Cup

Important Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book. There is a risk of injury if the product is misused.

IMPORTANT SAFEGUARDS

CAUTION: BURN HAZARD



- **WARNING:** very hot surfaces.
- **DO NOT TOUCH** hot surfaces as possible injury could occur. Always use the handle.
- **THIS IS AN ATTENDED APPLIANCE.** Do not leave unattended during use, unplug after each use. Never leave the appliance unattended when switched on or plugged in.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should always be supervised to ensure that they do not play with this appliance.
- Not for use by children. Keep the appliance and its supply cord out of reach of children during and after use.
- No repair should be carried out by the user. In case of fault, contact the Cuisinart Helpline, (see the "UK After Sales Serve" section).
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- To protect against fire, electric shock or personal injury, do not immerse the cord, plug or housing unit in water or other liquids. Do not put the unit in a dishwasher.

- This appliance is for indoor, domestic use only and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farmhouses; by customers in hotels, motels and other residential type environments; bed and breakfast type establishments.
- Do not wrap the supply cord around the main body of the appliance during or after use.
- Do not leave the supply cord hanging over the edge of a kitchen table or worktop.
- Do not allow the supply cord to come into contact with sources of heat.
- Always unplug the appliance from the mains outlet and allow to cool before cleaning.

ELECTRICAL SAFETY

- Always ensure the voltage to be used corresponds with the voltage on the appliance, this is indicated on the bottom of the housing.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Always disconnect the appliance from the electric supply, if it is left unattended and before assembling, disassembling or cleaning.
- Never pull the plug out of the mains socket by the supply cord.
- Always ensure that your hands are dry before touching the supply cord or removing the plug from the mains socket.

GENERAL SAFETY

- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to the 'UK After Sales Service' section for further information).
- Do not use the appliance for anything other than its intended use.
- Position the One Cup Grind & Brew Coffee Maker on a stable, level surface, near a power socket.
- Do not place the appliance in a cabinet when in use.
- Do not place the appliance on or near a hot gas or electric burner.

- Do not use accessories or attachments with this appliance, other than those recommended by Cuisinart.
- Periodically check all parts before use. If any part is damaged DO NOT USE.
- To avoid injury or possible fire, do not cover the appliance when in use.
- To protect against fire, electric shock or personal injury, do not immerse the main unit, power cord or plug in water or other liquids or place in a dishwasher.
- Switch off and unplug the appliance after use.
- Unplug from the mains when not in use and before cleaning. Allow to cool completely before fitting or removing parts and before cleaning the appliance.



WARNING: Polyethylene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see "U.K. After Sales Service" section).



Disposing of electrical and electronic appliances at the end-of-life

■ This symbol on the product or on the packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

USING THE CUISINART ONE CUP GRIND & BREW COFFEE MAKER

BEFORE FIRST USE

Before using your One Cup Grind & Brew Coffee Maker for the first time, ensure all packaging is removed and clean all parts thoroughly.

Initial Cleaning

- Remove the water tank from the unit and wash in warm, soapy water. Once dry, fill the water tank with water and replace back onto the unit.
- Plug the coffee maker into the mains and press the power button, to switch it on.
- Open and close the brew head but do not add any beans or coffee powder.
- Place a mug onto the drip tray. Press any of the cup size buttons to begin the brew cycle. The selected indicator will start flashing and the hot water will start to dispense momentarily.
- When the one-time cleaning process is complete, discard the hot water and the coffee maker is then ready to use.

INSTRUCTIONS FOR USE

Using the Control Panel



c.



d.



b.



d.



a.



d.

- a. Power On / Off – Press to switch the machine on and off.
- b. Grind Button – Press to automatically start or stop grinding coffee, into the HomeBarista® reusable filter cup. Will turn off when grinding is complete.
- c. Add Water Indicator – Indicator will illuminate red when the water level is low. The indicator will turn off, when the water tank is filled past the minimum level.
- d. Brew Size Buttons – Select from 120ml, 210ml and 300ml.

Making Coffee With Whole Beans

1. Remove the water tank and fill to the max fill line. Replace back onto the unit. If the water level is lower than the minimum fill, the 'Add Water' indicator light will illuminate.
2. Remove the bean hopper lid and add beans.



Note: The bean hopper holds up to 100g of beans and the airtight lid keeps them fresh.

3. Open the lid of the HomeBarista™ and insert into the holder, below the conical burr mill.



4. Press the power button to turn on the unit. The power and grind buttons will illuminate.



5. Press the grind button to start the grind process. The conical burr mill is set to automatically turn off, once the HomeBarista™ is full.
6. Remove the HomeBarista™ from the holder, making sure there are no ground coffee beans on the upper rim of the filter basket, before closing the lid. Open the brew head and place the HomeBarista™ into the brewing chamber.



Caution: There is a sharp needles in the brew head chamber. To avoid risk of injury, do not put your fingers in the brewing chamber.

7. When the brew head lever is closed, the brew size buttons will illuminate. Press the desired cup size to begin brewing.

Note: The brewing process can be stopped during brewing. Simply press the selected brew size button again to stop brewing.

8. When the brewing process is complete, the brew size buttons will go off. The grind button will remain on for use, until the brew head lever is opened, to begin the brewing process.
9. After brewing, raise the lever and remove the HomeBarista™. Do this with caution, as the HomeBarista™ will be hot.
10. After use, remove the HomeBarista™ from the brewing chamber, discard the used ground coffee or coffee powder and rinse with water. When thoroughly dried, the HomeBarista™ can be put into the side compartment for easy storage.

Note: HomeBarista™ can be used with pre-ground coffee. Simply fill the HomeBarista™ with ground coffee, making sure not to fill past the max indicator. Adjust the amount to your personal preference. Make sure there is no ground coffee on the upper rim of the basket, before closing the lid. Max fill: 2.5 scoops or 15 grams.

Cleaning & Maintenance

- Before first use and after every use, clean each part thoroughly.
- Always turn the coffee maker off and remove the plug from the mains before cleaning.
- Do not use scouring agents or harsh cleaning agents on any other parts of the appliance.
- Never immerse the main housing unit in water or other liquids. To clean the housing and control panel, simply wipe with a clean, damp cloth.
- Wipe the drip tray with a clean, damp cloth. Never use rough, abrasive materials or harsh cleaning agents to clean the resting plate.
- Do not dry the inside of the water tank with a cloth as lint may remain.
- Never wrap the cord around the outside of the unit.
- Never immerse the plug or lead in water or any other liquid.

Cleaning the HomeBarista™

- The HomeBarista™ is dishwasher safe (put on the top shelf). Discard any used coffee grounds and remove the inner filter basket, before placing in the dishwasher. Rinse the inner filter with warm water.

Cleaning the Brew Head & Chamber

Lift the brew head lever to open the brewing chamber.

CAUTION: There is a sharp needle in the brew head. To avoid risk of injury, do not put your fingers in the capsule brewing chamber.



Cleaning the Bean Hopper and Burr Grinder

- Be sure to empty any beans from the hopper, before unlocking and removing the burr grinder. The burr grinder must be removed before cleaning the bean hopper.
- Bean Hopper – Clean with a soapy, damp, non-abrasive cloth.
- Burr Grinder – Use the scoop brush to clean the grind outlet to clear away excess grounds and wipe with a wet cloth. The burr grinder is not dishwasher safe.

Descaling

It is strongly recommended that you descale the appliance from time to time. The frequency depends upon the harshness of your tap water and how often you use the appliance.

- Fill the water tank completely with a soft descaling agent, such as a mixture of citric acid and baking soda and switch the appliance on. One cycle should be sufficient to de-scale the appliance.
- Press the power button to turn the coffee maker on.
- Open and close the brew head but do not add any coffee grounds.
- Place a mug or container on the drip tray. Press any of the cup size buttons, to begin the cycle.
- To rinse, repeat this cycle once more using just cold tap water.

UK Guarantee

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email support@cuisinart.co.uk for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

www.cuisinart.co.uk