

MEASUREMENT SUGGESTIONS:

For the richest coffee flavour, we suggest using one and one-half (1½) rounded tablespoons of ground coffee for every 150ml of water.

The measurement markings on the lid indicate reference measurements.

For example, for automatic drip coffee, if you fill the lid to the ●●●● marking with whole beans, you will have enough ground coffee to reach the ●● marking.

Note: These markings are approximate. Experiment with different quantities to determine what works best for you.

CLEANING, STORAGE AND MAINTENANCE INSTRUCTIONS

1. Be sure that grinder plug has been removed from outlet.
2. Wipe inside of stainless steel bowl and lid with damp paper towel. Dry completely.
If desired, lid may be washed in warm water or in the top rack of a dishwasher. **Never immerse the grinder base unit in water or other liquid.**
3. Store excess cord by pressing a section at a time into the cord storage area in the base of the unit.
4. **Maintenance:** Any other servicing should be preformed by an authorised service representative.

UK GUARANTEE

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email support@cuisinart.co.uk for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

BN IB-24/351

Cuisinart®

INSTRUCTION BOOKLET



Coffee Grinder

DCG20U Series

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. **Read all instructions.**
2. **THIS IS AN ATTENDED APPLIANCE.** Do not leave unattended during use, unplug after each use.
3. To protect against risk of electrical shock, do not immerse cord, plug or grinder in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cable out of the reach of children. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
5. Unplug from outlet when not in use, before assembling or dissembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
6. Avoid contact with moving parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
8. The use of attachments not recommended or sold by Cuisinart may cause fire, electrical shock, or risk of injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Check hopper for presence of foreign objects before using.
12. Use this appliance to grind roasted coffee beans only. Grinding other substances, such as nuts, spices or unroasted beans may dull the blade and cause poor grinding or injury.
13. Do not operate your appliance in an garage or under a wall cabinet.
When storing in a garage always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

14. This appliance is for indoor, domestic use only and is not intended to be used in applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by customers in hotels, motels and other residential type environments;
 - bed and breakfast type establishments.
15. Periodically check all parts before assembly. If any part is damaged DO NOT USE.
16. Keep hands, spatulas and other utensils away from moving blades whilst the appliance is in operation.
17. Make sure the motor has completely stopped before removing the lid.
18. Always ensure the blades and bowl have been thoroughly cleaned after each use and have dried completely before storing.
19. To protect against fire, electric shock or personal injury, do not immerse the cord, plug or housing base in water or other liquids or place in a dishwasher.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

1. Plug cord into outlet.
2. Remove lid from base of grinder.
3. Fill stainless steel bowl with desired quantity of beans (see measurement suggestions on reverse.) For best results, do not fill beans above the top of the stainless steel bowl. Do not run unit with empty load.
4. Place the lid onto grinder base.
5. Press and hold On/Off button to begin grinding. Please note: A safety feature of this grinder requires that the grinder will not operate unless the lid is in place.
6. Grind until beans are ground to desired consistency (see grinding suggestions on reverse.) To stop grinding, release pressure from On/Off button.
7. Remove plug from outlet.
8. Measure ground coffee into coffeemaker filter using scoop (not included), tablespoon or lid measurement markings. See measurement suggestions on reverse.


FOR HOUSEHOLD USE ONLY

GRINDING SUGGESTIONS:

Some general guidelines for grinding are listed below. However, times will vary depending upon the amount and type of coffee used and your personal preference. The best way to determine how coarse or fine to grind your coffee is to experiment with different grinds and coffee types to suit your taste.

Set up to 40 seconds for one single use. Do not to run the unit continuously.

GRIND	SUGGESTED USE	GRIND TIME
Coarse	Percolator/ French Press	10 Seconds
Medium	Automatic Drip	20 Seconds
Fine	Espresso	30 Seconds

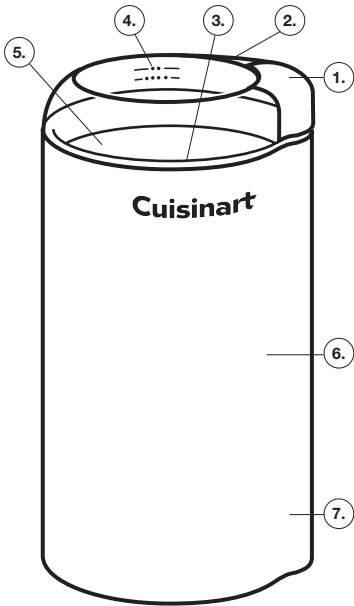

- | | |
|---------------------------|-------------------------|
| 1. On/Off Button | 5. Stainless Steel Bowl |
| 2. Lid | 6. Grinder Base |
| 3. Stainless Steel Blades | 7. Cord Storage |
| 4. Measurement Markings | |

Version no : DCG20BKNU IB-24 351-241204
Forming Size: 267mm(W)x171mm(H) -Fold to 89mm(W)x171mm(H)
Material : 105gsm Both side Artpaper for Whole Book
Coating : Gloss varnishing in cover
Color: 4C+1C (BLACK)
Date : 2024-12-04 Co-ordinator : Sharon Xu

Lian Chuang/Kind Description: DCG20BKNU IB-24 351-241204

Lian Chuang/Kind Code: _____ Operator: _____

Lian Chuang/Kind Size: _____

