



Filter Coffee Machine
DCC780 Series

Cuisinart®

Congratulations on your purchase of the Cuisinart Filter Coffee Machine.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long-life, and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products and for recipe ideas visit our website www.cuisinart.co.uk

Contents

| | |
|--------------------------------------|----|
| Product Description | 5 |
| Important Safety Cautions | 6 |
| Instructions for use | 9 |
| 1. Control Panel | 9 |
| 2. Setting the Clock | 9 |
| 3. Setting the Programme Timer | 9 |
| 4. Preparing to Brew | 10 |
| A. Adding Water | 10 |
| B. Adding Coffee..... | 10 |
| C. Preparing the Carafe | 10 |
| 5. Brewing Coffee..... | 10 |
| Cleaning & Maintenance | 11 |
| UK Guarantee..... | 12 |
| UK After Sales Service | 13 |

Product Description



Important Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book. There is a risk of injury if the product is misused.

IMPORTANT SAFEGUARDS

CAUTION: BURN HAZARD



- **WARNING:** very hot surfaces.
- **DO NOT TOUCH** hot surfaces as possible injury could occur. Always use the handle.
- **THIS IS AN ATTENDED APPLIANCE.** Do not leave unattended during use, unplug after each use. Never leave the appliance unattended when switched on or plugged in.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Heating surface is subjected to residual heat after use.
- Appliance shall not be placed in a cabinet when is use.
- Children should always be supervised to ensure that they do not play with this appliance.
- No repair should be carried out by the user. In case of fault, contact the Cuisinart Helpline, (see “UK After Sales Service” section).
- To protect against fire, electric shock or personal injury, do not immerse the cord, plug or housing unit in water or other liquids. Do not

put the unit in a dishwasher.

- This appliance is for indoor, domestic use only and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farmhouses; by customers in hotels, motels and other residential type environments; bed and breakfast type establishments.
- Do not wrap the supply cord around the main body of the appliance during or after use.
- Do not leave the supply cord hanging over the edge of a kitchen table or worktop.
- Do not allow the supply cord to come into contact with sources of heat.
- Always unplug the appliance from the mains outlet and allow to cool before cleaning.

ELECTRICAL SAFETY

- Always ensure the voltage to be used corresponds with the voltage on the appliance, this is indicated on the bottom of the housing.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Always disconnect the appliance from the electric supply, if it is left unattended and before assembling, disassembling or cleaning.
- Never pull the plug out of the mains socket by the supply cord.
- Always ensure that your hands are dry before touching the supply cord or removing the plug from the mains socket.

GENERAL SAFETY

- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to “UK After Sales Service” section) for further information.
- Do not use this appliance if the lead is damaged. In the event of a damaged lead, discontinue use immediately. Contact the Cuisinart Customer Care Line (see “UK After Sales Service” section).
- Do not use the appliance for anything other than its intended use.
- Do not place anything on top of the appliance while it is operating or while it is hot.
- Do not use accessories or attachments with this appliance other than those recommended by Cuisinart.
- Do not place the appliance on or near a hot gas or electric burner or

place in a heated oven.

- Never leave the appliance unattended when switched on or plugged in.
- Periodically check all parts before use. If any part is damaged DO NOT USE.
- To avoid injury or possible fire, do not cover the appliance when in use.
- To protect against fire, electric shock or personal injury, do not immerse the housing base, cord or plug in water or other liquids or place in a dishwasher.
- Switch off and unplug the appliance after use.
- Unplug from the mains when not in use and before cleaning. Allow to cool completely before fitting or removing parts and before cleaning the appliance.



WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see “U.K. After Sales Service” section).



Disposing of electrical and electronic appliances at the end-of-life

■ This symbol on the product or on the packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

BEFORE FIRST USE

Before using your Filter Coffee Machine for the first time, ensure all packaging is removed and clean all parts thoroughly (see Cleaning & Maintenance Section).

INSTRUCTIONS FOR USE

1. Control Panel

- a. Hour
- b. Min
- c. Brew / Off
- d. Prog
- e. Clean



2. Setting the Clock

When the unit is plugged in, the screen will show 12:00. Press and hold the 'Hour' or 'Min' button, until the numbers start to flash. Then press the 'Hour' and 'Min' buttons to scroll through the numbers and set the time. When the numbers stop flashing, the time has been set. The clock is 24hr programmable.

3. Setting the Programme Timer

Press and hold the 'Prog' button until the blue indicator light shows and the LCD display begins to flash with 12:00, this signals that you have entered the 'Set Programme Time' mode. The desired time can be set by pressing the 'Hour' and 'Min' buttons to scroll forward through the digits. Once the time has been selected, press the 'Prog' button once, so the blue indicator light is illuminated. Brewing will be begin at the programmed time.

N.B: The 'Prog' mode cannot be entered if the Filter Coffee Machine is in a brew cycle.

N.B: When setting the programme time, ensure coffee and water are placed in the machine before starting.

N.B: The display will show 'Prog' above the clock and the button will stay illuminated to show that a timer has been set. To switch the timer off, simply press the 'Prog' button, so it's no longer illuminated.

4. Preparing to Brew

Before making coffee for the first time, we recommend operating the appliance once, using only water, to remove any dust or residue that may remain in the system from the manufacturing process.

A. Adding Water

Open the lid of the main unit and pour the desired amount of water into the water tank, using the water level indicator. Close the reservoir lid, ensuring not to exceed the 2L maximum.

N.B: Do not exceed 2L (12 cups) of water. Doing so could cause the carafe to overflow.

N.B: The machine will use all of the water added, regardless of the amount of coffee used.

B. Adding Coffee

This machine uses ground coffee. With the scoop provided, we recommend you use 1 level scoop of ground coffee per cup. The maximum capacity for ground coffee is 12 cups. Exceeding this may cause the appliance to overflow.

N.B: Be careful to only add the amount of coffee for the number of cups you wish to brew. The machine will use all the coffee regardless of the amount of water used.

To add coffee, open the lid of the main unit and scoop the desired amount of coffee into the filter basket. Then close the lid.

C. Preparing the Carafe

Rinse the carafe with hot water, before every use.

5. Brewing Coffee

Now the machine is ready for use, ensure the machine is plugged into the mains.

To set the appliance, to start at a programmed time, refer to the 'Setting the Programme Timer' in section 3.

Then press the 'Brew/Off' button to brew fresh coffee.

When the brewing cycle has completed, the machine will beep. Coffee will

continue to stream from the filter for several seconds afterwards. After brewing, the appliance will automatically shut off. The keep warm feature will then maintain the temperature of the coffee, for up to 40 minutes.

CAUTION: The bottom of the carafe is hot to touch for several minutes after brewing.

Cleaning & Maintenance

- Before first use and after every use, clean each part thoroughly.
- Always turn the coffee maker off and remove the plug from the electrical outlet before cleaning.
- Do not use scouring agents or harsh cleaning agents on any other part of the appliance.
- Never immerse the main housing unit in water or other liquids. To clean the housing and control panel, simply wipe with a clean, damp cloth.
- Wipe the resting plate with a clean, damp cloth. Never use rough, abrasive materials or harsh cleaning agents to clean the resting plate.
- The carafe and lid can be washed in warm, soapy water and rinsed thoroughly.
- Do not dry the inside of the water tank with a cloth as lint may remain.
- Never wrap the cord around the outside of the unit.
- Never immerse the plug or lead in water or any other liquid.

A. Descaling

It is strongly recommended that you descale the appliance from time to time. The frequency depends upon the harshness of your tap water and how often you use the appliance or when the clean button illuminates red.

- Fill the water tank completely with a mixture of 1/3 white vinegar and 2/3 water and switch the appliance on. One cycle should be sufficient to de-scale the appliance.
- Press the 'Clean' button to turn the coffee maker on. Once the cycle has been completed, it will beep.
- Repeat this cycle once more using just cold tap water.

UK Guarantee

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email support@cuisinart.co.uk for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

www.cuisinart.co.uk

Version no.: DCC780U Series IB-20/388A

IB Size: 148mm(W) x 210mm(H)

Die Cut: new

Material: 157gsm gloss art paper for whole book

Coating: waterbase varnishing for whole book

Colors(Cover): 1C+1C(BLACK)

(Inside): 1C+1C(BLACK)

Date: SEP/13/2022 Co-ordinator: Astor You / Annie Liu

Revise Ver: F DCC780U Series IB-20/388A (1.0) Operator: LIAO

 **宝发柯式印刷有限公司**

Tel: 0769-8919 6622

Fax: 0769-8919 6271

E-MAIL: pofatpress@pofat.com

BLACK

100

95

90

85

80

75

70

65

60

55

50

45

40