

cuisinart®

SimpliTouch XL 2-Slice Toaster

RBT2200U SERIES



Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

- **CAUTION: BURN HAZARD - Hot surface.**
- The temperature of accessible surfaces may be high when the appliance is in use.
- This appliance is for indoor use only.
- To move the appliance only lift by the base. Lifting the appliance by the trays instead of the base could result in electrocution if energized.
- Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard. Risk of electrocution if metal objects are inserted when plugged in.
- Because the bread can burn, do not use the toaster near or under combustible materials like curtains or under kitchen wall cabinets.
- This appliance is intended for strictly domestic use and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service or a similarly qualified professional to avoid danger.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Let the appliance cool down completely and disconnect it before cleaning. Wipe the outside of the toaster with a clean damp cloth, then dry it carefully. To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place. Do not use the toaster without the crumb collector. To remove pieces remaining in the toaster, turn it upside down and shake gently to cause the pieces to drop.
- Do not place the appliance on or near a hot appliance. Do not use on heat-sensitive surfaces.
- Do not leave the appliance unattended when on.



- Always unplug the appliance after use and before cleaning. Never leave the appliance unattended when plugged in. Pull on the plug to unplug, never on the cable.
- The appliance should not be used with an external timer or with a separate remote control system.
- Do not use the appliance if it has fallen or if it looks damaged.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

ELECTRICAL SAFETY

The appliance is not intended to be operated by means of external timer or separate remote-control system.



WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



Disposing of electrical and electronic appliances at the end-of-life

This symbol on the product or on the packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

CONTENTS

Important Safeguards.....	2
Features and Benefits.....	3
Use and Care.....	4
Functions.....	4
Tips and Hints.....	5
Cleaning and Maintenance.....	5
Warranty.....	6

FEATURES AND BENEFITS

1. Power

Press to turn touchscreen controls on or off.

2. High-Lift Lever with QuickView™ Feature

Press the lever down to begin toasting. Lift lever at any time to observe the browning shade status without interrupting the toasting cycle.

3. XL Toasting Slots

Extra-large toaster slots accommodate a wider variety of breads.

4. Browning Control

Touch a shade icon (1-6) to select your desired browning level.

5. Bread-Type Buttons

Customised settings for Bread, Bagel, Sourdough, English Muffin and Tea Cake.

6. Defrost Button

Defrosts and toasts frozen items.

7. +15 Seconds

Can be used to extend your selected browning shade setting for an additional 15 seconds.

8. Single-Slice Button

Evenly toasts single slices, side to side.

9. Cancel Button

Stop the toasting process regardless of toasting process being complete.

10. Slide-Out Front Crumb Tray

Pulls out to remove crumbs that collect in bottom of toaster.

11. Cord Storage (not shown)

Takes up excess cord and keeps countertop neat.



USE AND CARE

Plug the power cord into wall outlet. Press Power button.

1. Insert slice(s) of bread.

Be sure that the carriage is in the up position.

2. Select bread type.

3. Select browning control.

Touch the desired shade level:

Setting	Color
1-2	light
3-4	medium
5-6	dark

4. Begin toasting.

Press the carriage lever until it locks into the down position.

Stop cycle.

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply touch the Cancel button. After use, unplug the toaster from the electrical outlet.

NOTE: After 3 minutes of no operation, toaster will go into idle mode and the display will turn off. To wake toaster, press the power button or push the start lever down, and the display will turn on.

NOTE: The Cancel button will only function during active toasting cycle.

Functions

QuickView™

The QuickView™ feature allows you to check on the toasting progress without interrupting the cycle. Simply lift the high-lift lever to temporarily raise and view your bread, and then release lever to automatically lower and continue toasting.

Power

Power control can be used to:

- Turn on the touchscreen controls.
- Power off the toaster.

+15 Seconds

The +15 Secs function allows you to extend the toasting time by 15 seconds.

If selected during toasting cycle:

- The +15 Secs icon will go from semi-lit to fully lit and start flashing. Current shade countdown will be paused. Upon completion of the 15-second cycle, the originally selected browning shade cycle will resume.

If selected after toasting cycle has completed:

- The +15 Secs icon will illuminate. Once the lever is pushed down, the +15 Secs icon will flash until time has elapsed.

Bagel

This toaster reduces heat on one side of the toasting slot for bagels. This toasts the cut side of the bagel slightly more than the other side.

 An icon located on the top of the toaster shows you the right way to insert your bagel. (The cut side should always face away from the center of the pair of toasting slots.)

Single-Slice Button

The single-slice function generates balanced heat for even toasting of just one slice of bread. While both slots heat up, the heaters automatically adjust time and intensity to ensure great results with even side-to-side browning.

1. Insert slice of bread.

Be sure that the carriage is in the up position.

2. Select bread type.

3. Set browning control.

4. Select the single-slice button. White LED indicates the feature is active.

5. Press the high-lift lever until it locks into position.

To stop cycle

When the single-slice cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply push the Cancel button to interrupt.

After use, unplug the toaster from the electrical outlet.

Defrost Button

The Defrost button is designed to first defrost and then toast the bread to your desired browning shade.

1. Insert slice(s) of bread.

Be sure that the carriage is in the up position.

2. Select bread type.

3. Set browning control.

4. Select the Defrost button. White LED indicates the feature is activated.

5. Press the high-lift lever until it locks into position.

To stop cycle

When the Defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply push the Cancel button to interrupt.

After use, unplug the toaster from the electrical outlet.

Cancel Button

The Cancel button lets you stop the toasting cycle at anytime.

NOTE: Cancel button will only function during active toasting cycle.

TIPS AND HINTS

Notes on browning

Toasting is a combination of cooking and drying bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole-wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) require a higher toast setting.
- Thickly cut pieces of bread take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins, etc., from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slots.
- Before toasting bagels, slice each bagel into two equal halves.

Frozen bread types, pancakes, French toast, and bagels

These items should be warmed before toasting, using the Defrost function. Select the bread type and then your preferred browning shade. Press high-lift lever and then press Defrost. For example, to toast a frozen bagel, select Bagel and then the browning level. Press the high-lift lever down, and then press Defrost.

Toaster pastries

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

For best results

- Never force foods into the toasting slots. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet before cleaning.
2. Do not use abrasive cleaners. Simply wipe the exterior with a clean, damp cloth and dry thoroughly.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slots, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
6. Any other servicing should be performed by an authorized service representative.

UK Guarantee

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

If you have any queries regarding this guarantee, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.



www.cuisinart.co.uk

IB-25/339