

Cuisinart®

NutSmart™ Plant-Based Drink Maker

PMM100U SERIES



Instruction Booklet

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

Contents

Important Safeguards	2
Unpacking Instructions	4
Parts.	4
Operation.	5
Cleaning and Care	6
Plant-Based Drink Maker Chart	6
Guarantee	8

Important Safeguards

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handle or knobs.
3. To protect against fire, electric shock, and injury to persons, DO NOT IMMERSE CORD, PLUG, LID, OR UNIT BASE in water or other liquids.
4. This appliance is not intended for use by children. Keep the appliance and its supply cord out of reach of children.
This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug from outlet or unit base when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
6. Do not operate any appliance with damage to the cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Return the appliance to the retailer where you purchased your NutSmart for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may result in fire, electric shock, or injury to persons.

8. This appliance is for indoor, domestic use only and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by customers in hotels, motels and other residential type environments; bed and breakfast type establishments.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach the plug to the appliance first, then plug cord into wall outlet. Ensure unit is not running a program cycle, and to disconnect, turn any control to "off", then remove plug from wall.
12. Do not use the appliance for anything other than its intended use.
13. Do not operate your appliance under a wall cabinet. When storing the appliance, always unplug the unit from the electrical outlet.
14. Avoid contact with moving parts.
15. **Blades are SHARP. Handle carefully when removing or cleaning the lid with blade assembly.**
16. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
17. Always ensure that your hands are dry before touching the supply cord or removing the plug from the mains socket.
18. The appliance is not intended to be operated by means of external timer or separate remote control system.
19. **IMPORTANT FOR SOYBEANS:** If the cycle is interrupted or incomplete, discard the contents and start over.
20. **IMPORTANT FOR SOYBEANS:** The pulp in the filter basket must be discarded after preparing soy drink.
21. Do not use outdoors.
22. **IMPORTANT FOR SOYBEANS:** Soak the soybeans, fully covering with cold at least 18 hours in the refrigerator. Discard the soaking water and rinse soybeans with clean water.

WARNING: very hot surfaces.
Do not touch hot surfaces. Always use the handle.

THIS IS AN ATTENDED APPLIANCE. Do not leave unattended during use, unplug after each use.

WARNING: Use extra care when working with hot liquids to avoid injury from overflowing, steaming and splattering.

WARNING: Do not open the lid while the appliance is in operation.

CAUTION: Do not operate the appliance on an inclined plane. Do not switch on the appliance if there is no water in the appliance. Do not move the appliance while it is switched on.

CAUTION: Please be cautious of spillage on the base connector.
Spillage can cause significant damage and lead to malfunctions.
Ensure that liquids are handled carefully and that the connector is protected from any exposure to water or other liquids.

Save These Instructions For Household Use Only

WARNING: RISK OF FIRE OR ELECTRIC SHOCK

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

If the unit overloads and motor stops running, unplug the unit and let it cool down for approximately 15 minutes before using again.



WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

Safe Disposal



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

Special Cord Set Instructions

A short, detachable power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance.

NOTE: Do not remove the grounding prong.

CAUTION: Before using an adapter, it must be determined that the outlet cover plate screw is properly grounded. If in doubt, consult a licensed electrician. Never use an adapter unless you are sure it is properly grounded.

Important Unpacking Instructions


1. Place the box on a large, sturdy, flat surface.
2. Remove the recipe book.
3. Slide the entire unit from the box and remove pulp tray packaging.
4. Remove the lid with attached filter basket and remove polybag.
5. Remove the detachable cord and remove polybag.
6. Remove collecting cup from bottom of the base and remove polybag.
7. Lift the power base from the box and remove the polybag. We suggest you save all packing materials in the event that future shipping of the machine is needed. Keep all plastic bags away from children.

- ## Parts
- 1. Control Panel**
features easy-to-use buttons.
 - 2. Lid Assembly**
has attached, motorised blade.
 - 3. Filter Basket**
is for pulp collection, with no need for additional straining.
 - 4. Base with Stainless Steel Vessel**
has a 1.4L capacity if used alone and a 1.2L maximum capacity when making plant drinks.
 - 5. Power Cord**
is removable for easy storage.
 - 6. Collecting Cup**
holds lid and drains filter basket, and is used for preparing creamers.
- NOTE:** Do not use the Collecting Cup with the Heat Setting.



Understanding Your Control Panel

1. No Heat Setting ☹
2. Heat Setting ☹
3. Keep Warm Setting ☹
4. Rinse Setting ☹
5. Setting Selector ☹
6. Start/Stop Button ☹

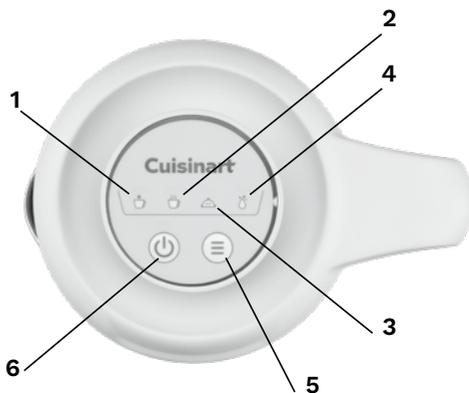

BEFORE USING FOR THE FIRST TIME

Before using your Cuisinart® NutSmart™ Plant-Based Drink Maker for the first time, we recommend rinsing the vessel, the filter basket, collecting cup, and the blade assembly with water to remove any dust or residue remaining from the manufacturing process.

Operation

No Heat Setting: recommended for NUTS, OATS, and GRAINS

Important: Do not use this setting to make SOY drink.

1. Attach the removable power cord to the NutSmart™ Plant-Based Drink Maker base.
2. Fill the filter basket to max fill line or below with nuts, grains, or seeds (or a blend). (For recipes, please refer to the chart on page 6 or use recipe book included.)
3. Attach the filter basket to the lid assembly and twist in the direction of the locking arrows to secure. Locking arrows must align.
4. Fill the vessel with cold or room temperature water between the MIN line and the MAX line, depending on your preference of creaminess.
5. Put the lid assembly with attached filter basket on the vessel.
6. Plug the power cord into the wall outlet. If the lid is properly attached, the control panel will illuminate. The light above Start/Stop  will blink, and the light above the No Heat  light will illuminate.
7. Press the Start/Stop button . NutSmart™ Plant-Based Drink Maker base will cycle. The light above the selected icon  will be blinking and the light above the Start/Stop button  will remain solid.

NOTE: This will let you know the NutSmart™ Plant-Based Drink Maker is running a cycle.

8. Once the cycle is finished (60 seconds), the  light will stop blinking and become solid. The Start/Stop  light will then start flashing, and there will be a series of beeps to confirm the cycle has ended.
9. Remove the lid assembly and stand it filter basket side down in the collecting cup to catch excess drink. The drink is now ready! Drink immediately or promptly store in the fridge.

Heat Setting: Necessary for SOY drink

1. Attach the removable power cord to the NutSmart™ Plant-Based Drink Maker base.

2. Fill the filter basket to max fill line or below with soy. (For recipes, please refer to the chart on page 6 or use recipe book included.)
3. Attach the filter basket to the lid assembly and twist in the direction of the locking arrows to secure. Locking arrows must align.
4. Fill the vessel with cold or room temperature water between the MIN line and the MAX line, depending on your preference of creaminess.
5. Put the lid assembly with attached filter basket on the vessel.
6. Plug power cord into wall outlet. If the lid assembly is properly attached, the control panel will illuminate. The light above Start/Stop  will blink, and the NutSmart™ Plant-Based Drink Maker will default to No heat setting .
7. Press setting selector  button on control panel to illuminate light above the heat setting icon .
8. Press the Start/Stop button . NutSmart™ Plant-Based Drink Maker base will cycle. The light above the selected icon  will be blinking and the light above the Start/Stop button  will remain solid.

NOTE: This will let you know the NutSmart™ Plant-Based Drink Maker is running a cycle.

9. Once the cycle is finished (approx. 40 minutes), the  light will stop blinking and become solid. The  light will then start flashing, and there will be a series of beeps to confirm the cycle has ended.
10. Remove the lid assembly and stand it filter basket side down in the collecting cup to catch excess drink. The drink is now ready! Drink immediately or promptly store in the fridge.

Keep Warm Setting

The Keep Warm setting is used to keep the plant-based drink warm for 30 minutes.

To use this setting, press the setting selector  repeatedly until the light above  illuminates.

Press the Start/Stop  button to activate setting.

The light above the No Heat setting  icon will blink, and the light above Start/Stop  will be solid until the 30-minute cycle finishes.

At the end of the 30-minute cycle, the light above the Keep Warm setting  will turn solid and the Start/Stop button  will start blinking.

Rinse Setting

The Rinse Setting is used to remove loose sediment/debris from the stainless steel vessel and blade assembly prior to a more thorough cleaning.

To use this setting, remove the filter basket from the lid assembly. Fill the stainless steel vessel

with clean water to the MIN line. Add 2–3 drops of dish detergent and attach the lid assembly. Press the Setting Selector repeatedly until the light above the Rinse Setting  icon illuminates. Press the Start/Stop  button to activate the setting.

The light above the Rinse Setting  icon will blink and the light above the Start/Stop  button will illuminate. At the end of the cycle, the Rinse Setting  icon will turn solid and the light above the Start/Stop  button will start blinking.

CLEANING AND CARE

Follow the Rinse Setting instructions above, or if you prefer hand-washing, unplug the unit and allow it to cool before cleaning.

To clean the stainless-steel vessel, add soapy water and use a cloth or sponge to clean the interior. Rinse with warm water.

To clean the lid and blade assembly, rinse the blade under running water or use a soapy sponge or brush.

NOTE: Do not immerse vessel or lid assembly in water.

Wipe the outside of the vessel and base of unit with a soft, damp cloth. Dry all parts after every use.

Wipe the head unit with a damp cloth. Do not rinse it under water.

The filter basket and collecting cup are top-rack dishwasher safe.

MAINTENANCE

Any other servicing should be performed by an authorised service representative.

Plant-Based Drink Maker Chart

Type	Ingredient	Soak Y/N	Amount (g)	Water (ml)	Setting	Yield (ml)
Nut	Nuts of choice	N	175	960		960
Oat	Rolled oats	N	125	960		960
Flax	Flax meal	N	120	960		960
Hemp	Hemp seeds	N	200	960		960
Pea	Dried split peas	N	50	960		960
Coconut	Unsweetened coconut	N	100	960		960
Soy	Dried soybeans	Y*	45	960		850
Rice	Cooked rice	N	195	960		960
Nut Creamer	Nuts of choice	N	140	480		480
Oat Creamer	Rolled oats	N	100	480		480

Note: The Usable capacity once assembled is 1.2L. DO NOT fill water higher than the MAX fill. DO NOT use the collecting cup with the heat setting. These recipes were developed for best flavour results.

* **IMPORTANT:** Soak the soybeans, fully covering with cold water for at least 18 hours in the refrigerator. Drain and rinse before transferring to the filter basket.

IMPORTANT: Drink/ Use immediately or promptly store properly in the fridge.

Preparing Creamers

NOTE: Do not use the Collecting Cup with the Heat Setting.

1. Attach the removable power cord to the NutSmart™ Plant-Based Drink Maker base.
2. Fill the filter basket to the max fill line or below with nuts, grains, or seeds (or a blend). (For additional recipes, please refer to the chart above or use recipe book included.)
3. Attach the filter basket to the lid assembly and twist in the direction of the locking arrows to secure. Locking arrows must align.
4. Add 480ml cups of water and any liquid sweeteners or flavorings to the collecting cup. Place the collecting cup in the vessel and then attach the lid assembly with the attached filter basket to the base.
5. Plug the power cord into a wall outlet. The control panel will illuminate. The ☺ icon will blink, and the ☺ light will illuminate.
6. Press the ☺ icon. The ☺ light will blink, the ☺ light will illuminate, and the cycle will start.
7. Once the cycle is finished, the ☺ light will stop blinking and become solid. The ☺ light will then start flashing, and there will be a series of beeps to confirm the cycle ended.
8. Remove the lid assembly. Your creamer is ready!

Guarantee

Limited Three-Year Guarantee

Your Cuisinart NutSmart ("The Product") is guaranteed for consumer use for 3 years from the date of purchase or date of delivery, whichever is the latest, ("Guarantee Period") and is only valid within the Territory of Purchase (the place your product was purchased; UK or EU).

If the Product develops a fault due to defects in materials or manufacture within the Guarantee Period, please contact your Local Distributor who will arrange for repair or replacement of the Product in accordance with the terms of this Guarantee.

Should your Local Distributor be unable to repair or replace your Product under this Guarantee, then we will refund you. The amount of such a refund may be partial depending on how long the product has been used for before developing a fault.

Exclusions

This Guarantee will not be valid, meaning the Local Distributor will not be liable to repair or replace your product where:

1. The Product has been used as non-consumer product, for example for a professional, commercial or business purpose, outside a domestic setting, or for other reasons that would be reasonably considered to be non-consumer related.
2. The Product has been used on a voltage supply other than that which is marked on the product or advised within this instruction booklet.
3. The Product has been purchased from an unauthorised stockist*.
4. The Product has been used with unofficial replacement parts, or parts purchased from an unauthorised stockist*.
5. Repairs or alterations have been attempted by unauthorised persons.
6. The failure of the appliance is a direct result of misuse.
7. The failure is a result of not following the instructions for use.
8. The Product has been used outside the Territory of Purchase.
9. The Product is subject to cosmetic damage.

* unauthorised stockists include, but are not limited to online auction sites, unauthorised retailers, private sellers and those selling second hand goods, refurbished products etc . You can contact us for a list of authorised stockists.

If the holder of the Product is not the original purchaser, such as when it has been received as a gift, this Guarantee will still be valid providing the terms have been met, and proof of purchase can be provided.

If you have any queries regarding this guarantee please contact your Local Distributor.

It is important to retain your proof of purchase.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is provided by the Local Distributor of the product in your region and does not affect your statutory rights.

For further advice on using the appliance or should you need to return your product, please contact your Local Distributor.

After Sales Service

For further advice on using the Product or should you need to return your Product, please contact your Local Distributor.

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

**Distributed in the UK by Spree TV Limited.
c/o Prolog Fulfilment Ltd, NG15 0DF**

Email: customercare@nutsmart.co.uk

Phone: 0333 015 9700

www.buynutsmart.co.uk