

Cuisinart®

Core Collection Kettle

JK1200 & 1600 SERIES



Instruction
Booklet

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

IMPORTANT SAFEGUARDS



- **WARNING:** Burn hazard - Do not touch very hot surfaces. Always use the handle.
- **THIS IS AN ATTENDED APPLIANCE.**
Do not leave unattended during use, unplug after each use.
- **WARNING:** Use extra care when working with hot liquids to avoid injury from overflowing, steaming and splattering.
- **WARNING:** Do not remove or open the lid while the water is boiling.
- **CAUTION:** Position the lid so that the steam is directed away from the handle.
- **CAUTION:** Do not operate the kettle on an inclined plane. Do not switch on the kettle if there is no water in the kettle. Do not move the kettle while it is switched on.
- **CAUTION:** Please be cautious of spillage on the base connector. Spillage can cause significant damage and lead to malfunctions. Ensure that liquids are handled carefully and that the connector is protected from any exposure to water or other liquids.
- The appliance is not intended to be operated by means of external timer or separate remote control system.
- Never pull the plug out of the mains socket by the supply cord.
- Always ensure that your hands are dry before touching the supply cord or removing the plug from the mains socket.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service section" for further information).

- Do not leave the supply cord hanging over the edge of a kitchen table or worktop.
- Do not use the appliance if the supply cord is damaged. In the event of supply cord damage, discontinue use immediately. If the supply cord is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted.
- Take care not to allow the appliance surfaces to come into contact with other heat sensitive surfaces.
- Always unplug the appliance from the mains outlet and allow to cool before cleaning.
- Do not exceed the maximum fill level as clearly marked on the water level indicator. If the kettle is overfilled, boiling water may be ejected.

CAUTION: BURN HAZARD

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should always be supervised to ensure that they do not play with this appliance.

CLEANING & MAINTENANCE & DESCALING

- Always unplug the appliance from the mains outlet before cleaning.
- Allow to cool before cleaning the appliance.
- Clean the exterior surface of the kettle with a clean damp cloth to preserve its original finish. Dry and polish with a soft cloth.
- Do not use abrasive cleaners or scouring agents of any kind on the interior Or exterior of the kettle.

WARNING! Do not immerse the kettle or the power base in water or any other liquid. Ensure the electric kettle socket is kept dry.

- Use filtered or low-calcium water to limit scale build-up.
- To remove scale, use a kettle descaler or:
 - Cover the bottom of the kettle with 2cm of white vinegar.
 - Boil, cool, and repeat if needed.
- Once descaled, empty the kettle.

ELECTRICAL SAFETY

The appliance is not intended to be operated by means of external timer or separate remotecontrol system.



WARNING: The polyethylene bags over the product or its packaging may be dangerous.

Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



Disposing of electrical and electronic appliances at the end-of-life

 This symbol on the product or on the packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.


GUARANTEE

This appliance is guaranteed for consumer use for **3 years** and is only valid within the United Kingdom. This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later. If the product develops a fault due to defects in materials or manufacture within **12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange. If the product develops a fault due to defects in materials or manufacture after **12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product. If you have any queries regarding this guarantee, please contact the Conair Customer Care Line on **03702 406 902** (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk.

CONTENTS

Important Safeguards	2
Product Control	4
Instructions for Use.....	5
Hints & Tips.....	5
Cleaning & Maintenance	5
DESCALING.....	5
UK Guarantee	6

PRODUCT CONTROL

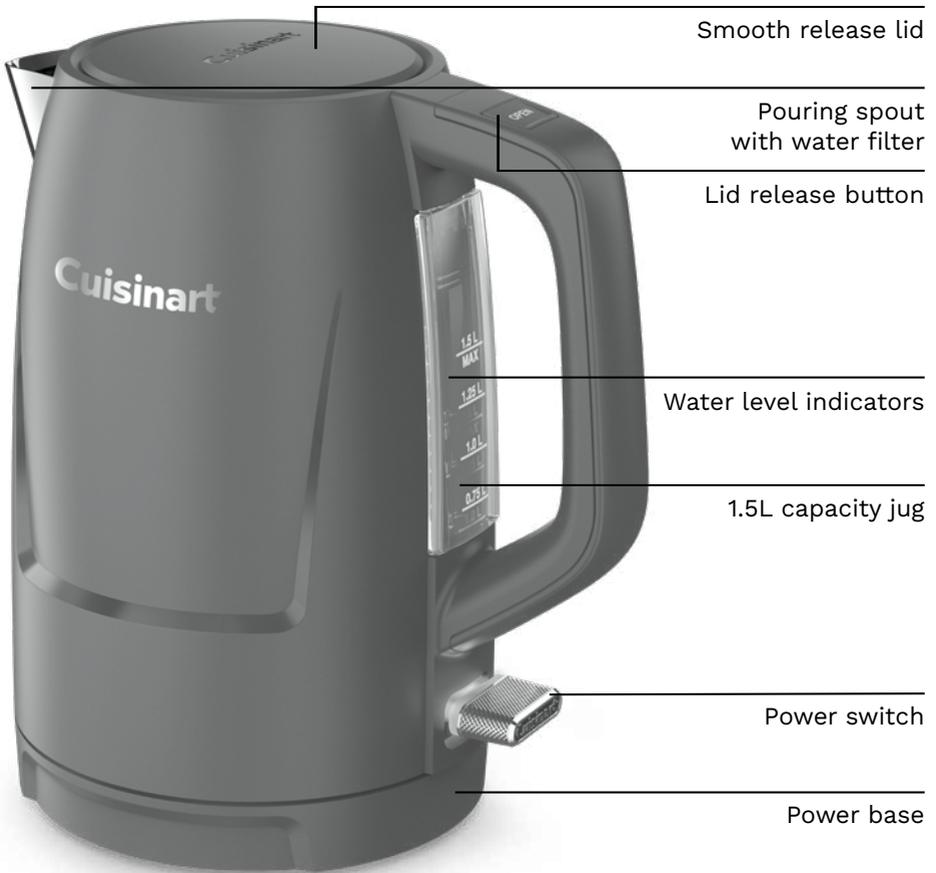

INSTRUCTIONS FOR USE

Before using for the first time, we recommend operating the kettle 2 or 3 times. This will remove any dust or residue remaining from its manufacture. Fill to the MAX mark level (1.5L), bring to the boil and when boiling has finished and the kettle has switched off, discard the water and rinse out the inside.

Open the lid by pressing the lid release button located on top of the handle.

Fill the kettle with the required amount of cold water. The water gauge is on the side of the kettle and is marked with MIN (0.5L) and MAX (1.5L).

N.B. Take care not to exceed the MAX mark as this may cause spitting or leaking from the spout when boiling.

Push the lid to close it; you will feel and hear a slight click.

Align the kettle over the power base with the spout facing away from you and gently lower it into position, sitting it firmly on the power base.

Switch the kettle on by pressing down the power switch at the rear of the kettle.

The kettle will switch off automatically when it has finished boiling. However, the kettle can be switched off at any time by simply lifting the power switch.

Pour water out slowly and return the kettle to the power base after pouring. If you wish to re-boil the water, you must press the power switch again.

N.B. A couple of water droplets or condensation may appear on the power base, this is quite normal and not a leak.

N.B. Do not open the lid of the kettle or during the heating process when pouring; escaping steam may scald.

Once the kettle is re-located on the power base, it can be switched on again at any time. If the switch will not stay down, it means the control is still a little warm; this is normal and it will simply re-set itself in a few seconds when cooled and will be ready to boil again.

N.B. If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.

HINTS & TIPS

Always use fresh, cold water each time you boil.

If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.

For best results, empty the kettle after each use. Do not leave water standing in the kettle. This is to help prevent build up of hard water limescale.

CLEANING & MAINTENANCE

Always unplug the appliance from the mains outlet before cleaning.

Allow to cool before cleaning the appliance.

Clean the exterior surface of the kettle with a clean damp cloth to preserve its original finish. Dry and polish with a soft cloth.

Do not use abrasive cleaners or scouring agents of any kind on the interior or exterior of the kettle.

WARNING! Do not immerse the kettle or the power base in water or any other liquid. Ensure the electric kettle socket is kept dry.

DESCALING

To limit scale build-up, we recommend you use only filtered or low-calcium water.

During use, lime deposits will form on the inside of your Cuisinart Jug Kettle. To get the best performance from the kettle, we recommend descaling it from time to time. Frequency depends on the hardness of your tap water and how often you use your kettle.

We suggest use of a kettle descaler in order to dissolve the scale. Simply follow the manufacturer's guidelines on the packaging. Alternatively pour in enough white vinegar to cover the bottom of the kettle by about 2cm. Bring the vinegar to the boil; you may need to repeat this several times with cooled vinegar to remove the build-up completely.

When the kettle is descaled, empty the kettle and rinse out several times with clean water. Take care not to inhale fumes.

UK GUARANTEE

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

EXCLUSIONS

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email support@cuisinart.co.uk for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:
Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

www.cuisinart.co.uk

Cuisinart®

2-Slice XL Toaster

CTP1200U & CPT1600U



Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:



- **CAUTION: BURN HAZARD - Hot surface.**
- The temperature of accessible surfaces may be high when the appliance is in use.
- This appliance is for indoor use only.
- To move the appliance only lift by the base. Lifting the appliance by the trays instead of the base could result in electrocution if energized.
- Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard. Risk of electrocution if metal objects are inserted when plugged in.
- Because the bread can burn, do not use the toaster near or under combustible materials like curtains or under kitchen wall cabinets.
- This appliance is intended for strictly domestic use and is not intended to be used in applications such as staff kitchen areas in shops, offices and other working environments; farmhouses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service or a similarly qualified professional to avoid danger.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Let the appliance cool down completely and disconnect it before cleaning. Wipe the outside of the toaster with a clean damp cloth, then dry it carefully. To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place. Do not use the toaster without the crumb collector. To remove pieces remaining in the toaster, turn it upside down and shake gently to cause the pieces to drop.
- Do not place the appliance on or near a hot appliance. Do not use on heat-sensitive surfaces.
- Do not leave the appliance unattended when on.
- Always unplug the appliance after use and before cleaning. Never leave the appliance unattended when plugged in. Pull on the plug to unplug, never on the cable.

- The appliance should not be used with an external timer or with a separate remote-control system.
- Do not use the appliance if it has fallen or if it looks damaged.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

ELECTRICAL SAFETY

The appliance is not intended to be operated by means of external timer or separate remote-control system.



WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.




Disposing of electrical and electronic appliances at the end-of-life

This symbol on the product or on the packaging indicates that this product may not be treated as household waste. Instead, it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

CONTENTS

Important safeguards	2
Electrical safety	2
Parts & features	3
Operating Instructionse	4
Functions	4
Tips and hints	5
Cleaning & maintenance	5
Guarantee	6

PARTS & FEATURES

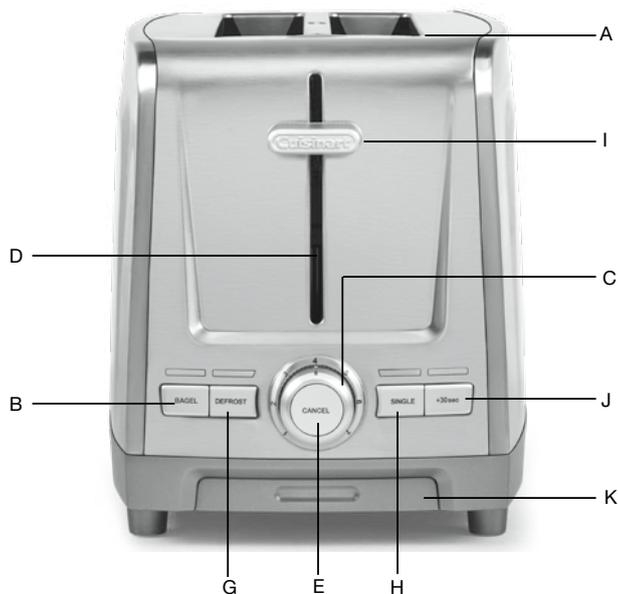

A. Extra Large Dual Toasting Slots

XL Wide slots to accommodate a variety of bread types.

B. Bagel Button

Press to activate the Bagel setting, ideal for bagels, teacakes, burger buns, and more. This function toasts the cut side only, gently warming the outside to keep it soft. The button lights up solid while toasting.

C. Toast Shade Dial (7 Settings)

Twist to select desired shade level (1-7).

D. Toast Activation

Activate the toasting function by pushing the lever down towards the Toast Shade Dial; the carriage will lower the bread into the toasting chamber.

E. Cancel Button

Press the CANCEL button in the centre of the Toast Shade Dial to stop the toasting process and eject the bread.

F. Audible Tone (not shown)

Lets you know when toasting is finished.

G. Defrost Button

Frozen bread? Defrost selection enables ability to toast frozen bread. LED indicator will illuminate when selected.

H. Single Slice Toast Button

Adjusts the heat from the middle elements to evenly toast one slice of bread. LED indicator will illuminate when selected. Don't use for crumpets or English muffins.

I. QuickView™ Lever

Lever allows you to momentarily lift the bread during toasting to observe the shade status without interrupting the toasting cycle.

J. +30Sec Button

Can be used to toast for 30 seconds or to extend an originally selected browning shade setting for an additional 30 seconds.

K. Slide Out Crumb Tray

A removable tray located at the front of toaster that collects crumbs and slide out for easy cleaning.

L. Cord Storage (not shown)

Wraps the excess cord to keep countertop neat.

OPERATING INSTRUCTIONS

- **Place the toaster on a flat, even surface**
- **Check that the crumb collector is installed in the appliance**
- **Insert slice(s) of bread into the slots**
- **Select relevant function**
- **Set the browning shade** - Use the dial to select your desired shade setting.
- **To begin toasting** - Push down the lever towards the control dial. The bread will lower into the toasting chamber and toasting will begin. Countdown bars will flash to indicate how much toasting time remains.
- **To view the toast mid cycle** - Mid cycle, to check on the toast shade, use the QuickView™ Lever to raise and lower the toast. Cycle will not be interrupted.
- **To stop the toast cycle** - When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the CANCEL button.
- After use, unplug the toaster from the electrical outlet.

FUNCTIONS

A. Bagel

The **Bagel** function is designed to perfectly toast bagels by directing more heat to the cut side and gently warming the outer crust. This ensures a crispy inside and a soft, chewy outside.

B. Defrost

The **Defrost** function is a longer cycle designed to first defrost and then toast the bread to the desired browning shade.

C. Single

The **Single** button adjusts heat to evenly toast one slice of bread. **NOTE:** While both slots heat up, the heaters automatically adjust time and intensity to ensure great results with even side-to-side browning. Do not use this setting for Crumpets or English Muffins.

D. +30Sec

The **+30Sec** function allows you to extend the toasting time by 30 seconds.

If selected during toasting cycle:

The +30Sec LED indicator will flash. Current shade countdown will be paused. Upon completion of the 30-second cycle, the originally selected browning shade cycle will resume.

If selected after toasting cycle has completed:

The +30Sec LED indicator will light and shade setting will disappear. Once toasting begins the +30Sec indicator will flash until time has elapsed.

E. QuickView™

The QUICKVIEW™ feature allows you to check on the toasting progress without interrupting the cycle. Simply raise the lever during toasting to momentarily lift the bread to observe the shade status. Then lower the bread and continue toasting without interrupting the cycle.

FUNCTION	OUTCOME
Bagel	for toasting bagels, buns, tea cakes and more
Defrost	for frozen slices
Single	for toasting 1 slice
+30Sec	toast/heat for extra 30 seconds

SETTING	COLOUR
1-2	light
3-5	medium
6-7	dark

HINTS & TIPS

- Bread rolls, muffins or thick slices should be toasted longer.
- To toast croissants, cut them in half horizontally. To reheat them only, use the reheat setting.
- When toasting fruit breads, remove any loose fruits from the surface of the bread to prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slots.
- If you are toasting a single slice of bread, set the heat selector to a lighter setting than you normally would.
- Never force foods into the toasting slots. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to inserting slices of uneven thickness.

CLEANING & MAINTENANCE

- Always disconnect the toaster from the mains immediately after use and allow to cool completely before cleaning.
- Do not immerse the appliance in water or any other liquid or place in a dishwasher.
- Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Always apply any cleaning agent to a cloth, not to the toaster.
- To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place.
- To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake.
- Never wrap the cord around the outside of the toaster.

IMPORTANT: Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard.

UK Guarantee

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

If you have any queries regarding this guarantee, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.



www.cuisinart.co.uk

IB-25/249