

Cuisinart®

Smart Elite Kettle

CPK525 SERIES



Instruction
Booklet



www.cuisinart.co.uk
Follow us @cuisinart_europe

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

IMPORTANT SAFEGUARDS



- **WARNING:** Burn hazard - Do not touch very hot surfaces. Always use the handle.

• THIS IS AN ATTENDED APPLIANCE.

Do not leave unattended during use, unplug after each use.

- **WARNING:** Use extra care when working with hot liquids to avoid injury from overflowing, steaming and splattering.
- **WARNING:** Do not remove or open the lid while the water is boiling.
- **CAUTION:** Position the lid so that the steam is directed away from the handle.
- **CAUTION:** Do not operate the kettle on an inclined plane. Do not switch on the kettle if there is no water in the kettle. Do not move the kettle while it is switched on.
- **CAUTION:** Please be cautious of spillage on the base connector. Spillage can cause significant damage and lead to malfunctions. Ensure that liquids are handled carefully and that the connector is protected from any exposure to water or other liquids. Only use the appliance to heat water. Never fill the kettle with other liquids.
- This appliance is intended for strictly domestic use and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

- Never pull the plug out of the mains socket by the supply cord.
- Always ensure that your hands are dry before touching the supply cord or removing the plug from the mains socket.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to “UK After Sales Service section” for further information).
- Do not leave the supply cord hanging over the edge of a kitchen table or worktop.
- Do not use the appliance if the supply cord is damaged. In the event of supply cord damage, discontinue use immediately. If the supply cord is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to ‘UK After Sales Service’ section for further information). No repair must be attempted.
- Take care not to allow the appliance surfaces to come into contact with other heat sensitive surfaces.
- Always unplug the appliance from the mains outlet and allow to cool before cleaning.
- Do not exceed the maximum fill level as clearly marked on the water level indicator. If the kettle is overfilled, boiling water may be ejected.

CAUTION: BURN HAZARD

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should always be supervised to ensure that they do not play with this appliance.

ELECTRICAL SAFETY

The appliance is not intended to be operated by means of external timer or separate remotecontrol system.



WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



Disposing of electrical and electronic appliances at the end- of-life

This symbol on the product or on the packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

CONTENTS

Important Safeguards.....	2
Control Panel.....	3
Instructions for Use.....	4
Cleaning & Maintenance.....	4
Descaling.....	5
UK Guarantee.....	6

CONTROL PANEL

SET TEMP Button - Used to increase the temperature in increments of 5 degrees from 50°C through to 100°C.

Press and hold the SET TEMP button for 3 seconds, it can switch to show °C or °F unit.

BOIL button - Temperature setting to 100°C.

START/STOP button



INSTRUCTIONS FOR USE

Before using for the first time, we recommend operating the kettle 2 or 3 times. This will remove any dust or residue remaining from its manufacture. Fill to the MAX mark level, bring to the boil and when boiling has finished and the kettle has switched off, discard the water and rinse out the inside.

Open the lid by pressing the lid release button located on top of the handle.

Fill the kettle with the required amount of cold water. The water gauge is on the side of the kettle and is marked with MIN and MAX.

N.B. Take care not to exceed the MAX mark as this may cause spitting or leaking from the spout when boiling.

Push the lid to close it; you will feel and hear a slight click.

Align the kettle over the power base with the spout facing away from you and gently lower it into position, sitting it firmly on the power base.

The kettle will switch off automatically when it has finished boiling.

Pour water out slowly and return the kettle to the power base after pouring.

N.B. A couple of water droplets or condensation may appear on the power base, this is quite normal and not a leak.

N.B. Do not open the lid of the kettle or during the heating process when pouring; escaping steam may scald.

Once the kettle is re-located on the power base, it can be switched on again at any time.

N.B. If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.

CLEANING & MAINTENANCE

Always unplug the appliance from the mains outlet before cleaning.

Allow to cool before cleaning the appliance.

Clean the exterior surface of the kettle with a clean damp cloth to preserve its original finish. Dry and polish with a soft cloth.

Do not use abrasive cleaners or scouring agents of any kind on the interior or exterior of the kettle.

WARNING! Do not immerse the kettle or the power base in water or any other liquid. Ensure the electric kettle socket is kept dry.

DESCALING

To limit scale build-up, we recommend you use only filtered or low-calcium water.

During use, lime deposits will form on the inside of your Cuisinart Jug Kettle. To get the best performance from the kettle, we recommend descaling it from time to time. Frequency depends on the hardness of your tap water and how often you use your kettle.

We suggest use of a kettle descaler in order to dissolve the scale. Simply follow the manufacturer's guidelines on the packaging. Alternatively pour in enough white vinegar to cover the bottom of the kettle by about 2cm. Bring the vinegar to the boil; you may need to repeat this several times with cooled vinegar to remove the build-up completely.

When the kettle is descaled, empty the kettle and rinse out several times with clean water. Take care not to inhale fumes.

UK GUARANTEE

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

EXCLUSIONS

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse

6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email support@cuisinart.co.uk for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

www.cuisinart.co.uk