


Cuisinart®

Retro Series Toaster

CPT3200BU
CPT3300BU
CPT3400BU

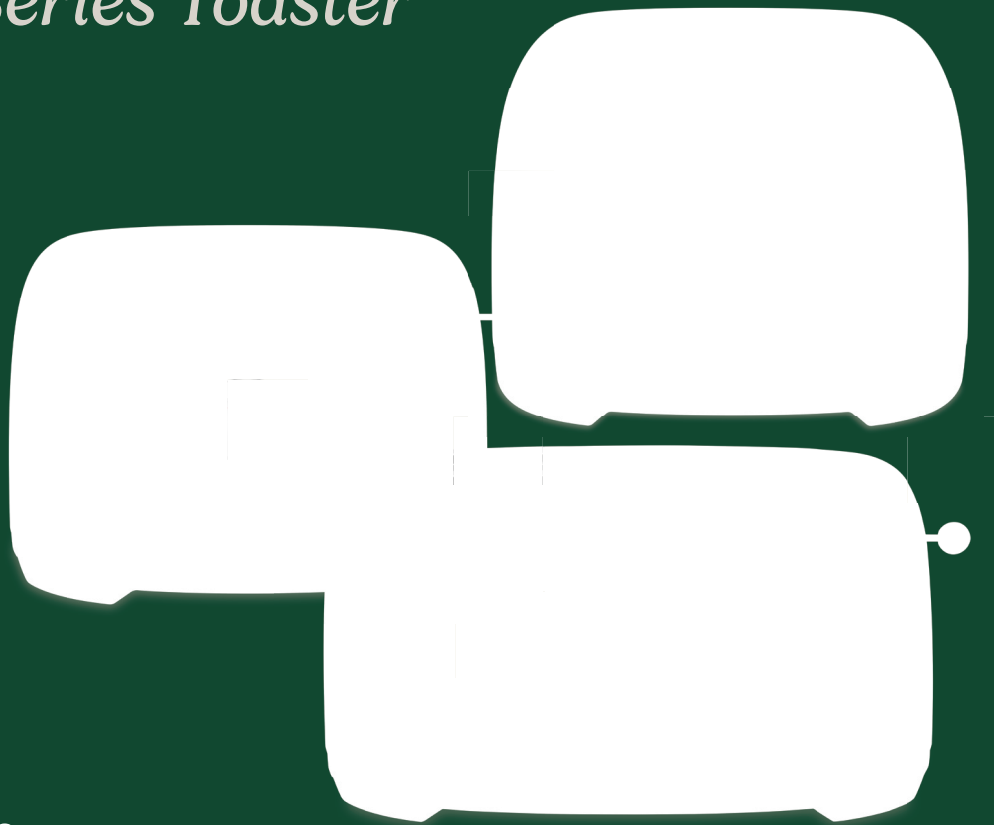

Instruction
Booklet

For your safety and continued enjoyment of this product, always
read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:



- **CAUTION: BURN HAZARD - Hot surface.**
- The temperature of accessible surfaces may be high when the appliance is in use.
- This appliance is for indoor use only.
- To move the appliance only lift by the base. Lifting the appliance by the trays instead of the base could result in electrocution if energized.
- Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard. Risk of electrocution if metal objects are inserted when plugged in.
- Because the bread can burn, do not use the toaster near or under combustible materials like curtains or under kitchen wall cabinets.
- This appliance is intended for strictly domestic use and is not intended to be used in applications such as staff kitchen areas in shops, offices and other working environments; farmhouses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service or a similarly qualified professional to avoid danger.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Let the appliance cool down completely and disconnect it before cleaning. Wipe the outside of the toaster with a clean damp cloth, then dry it carefully. To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place. Do not use the toaster without the crumb collector. To remove pieces remaining in the toaster, turn it upside down and shake gently to cause the pieces to drop.
- Do not place the appliance on or near a hot appliance. Do not use on heat-sensitive surfaces.

- Do not leave the appliance unattended when on.
- Always unplug the appliance after use and before cleaning. Never leave the appliance unattended when plugged in. Pull on the plug to unplug, never on the cable.
- The appliance should not be used with an external timer or with a separate remote-control system.
- Do not use the appliance if it has fallen or if it looks damaged.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

ELECTRICAL SAFETY

The appliance is not intended to be operated by means of external timer or separate remote-control system.



WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



Disposing of electrical and electronic appliances at the end-of-life

This symbol on the product or on the packaging indicates that this product may not be treated as household waste.

Instead, it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

CONTENTS

Important safeguards	2
Electrical safety.....	2
Before first use	3
Parts & features.....	3
General operation	4
Tips and hints	5
Cleaning & maintenance	5
Guarantee.....	6

BEFORE FIRST USE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug power cord into the wall outlet.

PARTS & FEATURES

A. Toasting Slots

Extra long toasting slots to accommodate a variety of bread types.

B. Bagel Button

The Bagel function is designed to toast bagels to perfection by reducing heat on one side of the toasting slot. An icon located on the top of the toaster shows you the right way to insert your bagel. (The cut side should always face away from the center of the pair of toasting slots.).



CPT-3200B



CPT-3300B



CPT-3400B

C. Single-slice Button

The Single-slice function toasts a single slice of bread evenly. Both slots heat up, followed by intelligently balance heat to help prevent over-toasting.

D. Cancel Button

Press the Cancel button to stop the toasting process and eject the bread.

E. Defrost Button

The Defrost function is a longer cycle designed to first defrost and then toast the bread to the desired browning shade. The LED indicator will illuminate when selected.

F. Browning Control Dial (7 Settings)

Adjust the control dial to set your desired toasting level (1-7).

G. QuickView™ Lever

Lever allows you to momentarily lift the bread during toasting to observe the shade status without interrupting the toasting cycle.

H. Crumb Tray

A conveniently located tray collects crumbs and slides out for easy cleaning..

I. Cord Storage (not shown)

Wraps the excess cord to keep countertop neat.

GENERAL OPERATION

1. Insert slice(s) of bread

Be sure that the QuickView™ Lever is in the up position.

2. Set the browning level

Turn the Browning Control Dial to your desired shade setting from 1-7. Shade range is as follows:

Control Setting	Color
1-2	light
3-5	medium
6-7	dark

3. Optional: Select desired toast function

Press the Bagel Button, Single-slice Button, or the Defrost Button to program your toaster according to what you are toasting, if desired. The LED indicator will illuminate for your selection. Only once the browning control dial is set past 1 minute these functions will operate.

4. Begin toasting

Lower the QuickView™ Lever until it locks in the down position. The Cancel Button LED indicator will illuminate. When the cycle finishes, whatever you are toasting will pop up and the QuickView™ Lever will spring back to its off position.

5. To stop cycle

If you wish to stop the cycle before it finishes, press the Cancel Button. The LED indicator will turn off and the QuickView™ Lever will spring back to its off position.

6. After use, unplug the toaster from the electrical outlet.

TIPS AND HINTS

Notes on browning

Toasting is a combination of cooking and drying of the bread. Therefore, differences in moisture level from one item to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole-wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as crumpets) will require a higher toast setting.
- Thickly cut pieces of bread will take longer to toast since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose fruit from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slots.
- Before toasting bagels, slice into two equal halves.

For Best Results

- Never force foods into the Toasting Slots. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to inserting slices of uneven thickness.

CLEANING AND MAINTENANCE

1. Always allow the toaster to cool completely before cleaning.
2. Always unplug the toaster from the electrical outlet before cleaning.
3. Do not use abrasive cleaners. Simply wipe the exterior with a clean, damp cloth and dry thoroughly.
4. To remove crumbs, slide out the Crumb Tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
5. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slots, as this could damage the toaster and cause a safety hazard.
6. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
7. Any other servicing should be performed by an authorized service representative.

UK Guarantee

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

If you have any queries regarding this guarantee, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre

Conair Logistics

Unit 4, Revolution Park

Buckshaw Avenue

Buckshaw Village Chorley

PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault. Please note this Instruction Booklet is not the guarantee.



www.cuisinart.co.uk

IB-26/631