

Cuisinart®

Follow us @cuisinart_europe



UK Guarantee

Limited Two-Year Guarantee

This appliance is guaranteed for consumer use for 2 years and is only valid within the United Kingdom. This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
 2. The appliance has been purchased from an unauthorised stockist *
 3. The appliance is used for professional / non domestic usage
 4. Repairs or alterations have been attempted by unauthorised persons
 5. The failure of the appliance is a direct result of misuse
 6. The failure is a result of not following the instructions for use This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.
- * unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

If you have any queries regarding this guarantee please contact the Conair Customer Care at support@cuisinart.co.uk or 03702 406 902.

It is important to retain your proof of purchase.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care at support@cuisinart.co.uk or 03702 406 902.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, swap email and phone around so email is first. Also remove times for phones.

Return address: Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

BaByliss SARL
ZI du Val de Calvigny
59141 Iwuy
France

 
The Conair Group Ltd
Unit 4, Revolution Park
Buckshaw Avenue
PR7 7DW

See our full line of premium Cuisinart™
Outdoor Cooking Products at www.cuisinart.eu

©2026 Cuisinart
Printed in China | CCG190RBEU

Cuisinart®

Outdoor Grilling Products
34cm Portable Charcoal Grill
CCG190RBEU

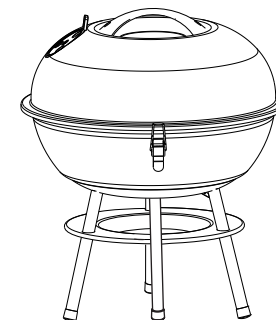

ASSEMBLY AND OPERATING INSTRUCTIONS

⚠ WARNING: FOR OUTDOOR USE ONLY

⚠ This instruction manual contains important information necessary for the proper assembly and safe use of the appliance

⚠ Read and follow all warnings and instructions before assembling and using the appliance

⚠ Follow all warnings and instructions when using the appliance

⚠ Keep this manual for future reference

Note to installer: Leave this Owner's Manual with the consumer after delivery and/or installation.

Note to customer: Leave this Owner's Manual in a convenient place for future reference.

⚠ DANGER – CARBON MONOXIDE HAZARD

Do Not Use Indoors! Burning charcoal releases carbon monoxide gas. If used indoors or in a poorly ventilated area, the gas can accumulate and cause serious injury or death.

⚠ DANGER

Do not store or use gasoline, alcohol or other flammable liquids to light charcoal. Use only charcoal lighter fluid following the manufacturer's instructions

⚠ DANGER

Failure to follow these instructions could result in fire, explosion or burn hazard, which could cause property damage, personal injury or death.

 
⚠ DANGER

1. Never operate this grill unattended.
2. Never operate this grill within 10 feet (3.05m) of any flammable material
3. Never operate this grill with 25 feet (7.5m) of any flammable liquid.
4. If a fire should occur, keep away from the grill and immediately call your fire department . Do not attempt to extinguish an oil or grease fire with water.

⚠ DANGER

Failure to follow these instructions could result in fire, explosion or burn hazard, which could cause property damage, personal injury or death.

Exploded View & Hardware Parts

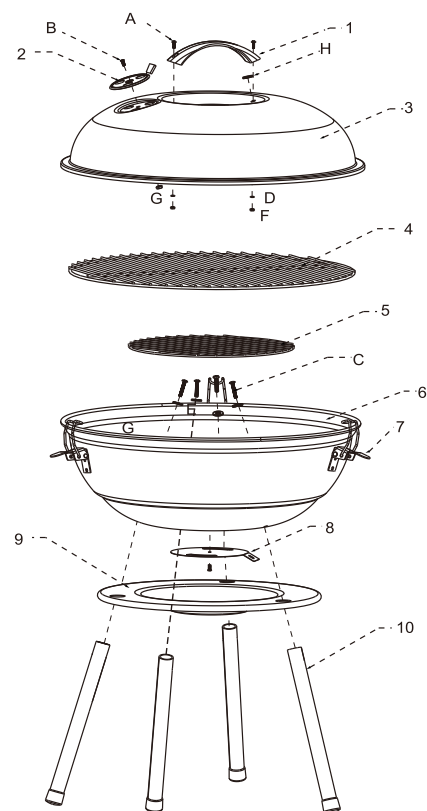

- 1. Lid handle x1pc
- 2. Lid air vent x1pc
- 3. Lid x1pc
- 4. Cooking grid x1pc
- 5. Charcoal grid x1pc
- 6. Fire bowl x1pc
- 7. Lid hinge x3pcs
- 8. Bottom air vent x1pc
- 9. Ash tray x1pc
- 10. Leg x4pcs

HARDWARE LIST

A. Handle Screw		2 pcs
B. Vent Screw		2 pcs
C. Leg Screw		4 pcs
D. Handle Washer		2 pcs
E. Leg Washer		4 pcs
F. Handle Nut		2 pcs
G. Vent Nut		2 pcs
H. Soft Handle Washer		2 pcs

 
PRE-ASSEMBLY CHECK LIST

- 1. To assure fast and easy assembly, follow the instructions below in their proper sequence.
 - 2. Check all parts carefully and compare them to the parts list.
 - 3. Report any missing parts to the company from with you purchased the product.
- NOTE: For some models, Part C Leg Screw and Part E Leg Washer may be located in the Leg.
- For some pre-assembled models, Steps 2 and 3 may have already been completed.
- STOP!** if you experience any missing or broken parts or have any questions regarding assembly, please call our Customer Service team.

ASSEMBLY STEPS


Step 1:

Put the legs (10) through hole of ash tray (9) and attach to the firebowl (6). Finger tighten to hold them together one by one. Tighten the screws using a screwdriver. Do not twist leg too tighten.

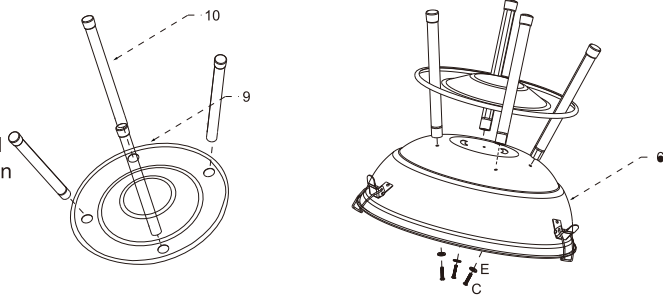


Step 2:

 Install the bottom air vent (8) to fire bowl (6).

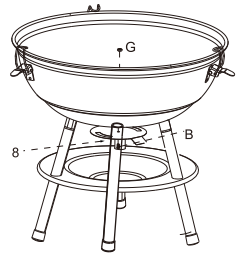

Step 3:

 - 1. Attach the lid handle (1) to the lid (3).
- 2. Attach the lid air vent (2) to the lid (3).

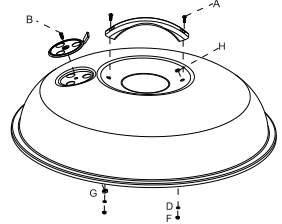

Operating Your Grill

Select a Proper Location

 
Once you have assembled your new grill, find a suitable location for use.

⚠ DANGER

- Never use this outdoor grill inside any building, garage, shed or breezeway, under an overhang or inside any boat, trailer or recreational vehicle, to prevent possible fire and to prevent the possibility of carbon monoxide poisoning or asphyxiation.
- Always place your grill on a hard and level surface far away from combustible materials and structures.
- Do not use this grill under overhead combustible surface or covered are (e.g., awnings, umbrellas, porches or gazebos). Keep all combustible surfaces at least 10 feet (3 meters) away.
- Locate the grill away from any combustible and non-combustible material or construction by at least 10 feet (3m).
- Never store or use gasoline or other flammable or volatile substances in the vicinity of this grill or in the vicinity of any other heat-generating appliance, because of the danger of starting a fire.
- Do not obstruct the flow of combustion and ventilation air.
- Keep children away during use.
- Store only after charcoal is fully cooled and disposed of.

Step 4:

Place charcoal grid (5) onto firebowl (6). Place cooking grid (4) on firebowl (6).

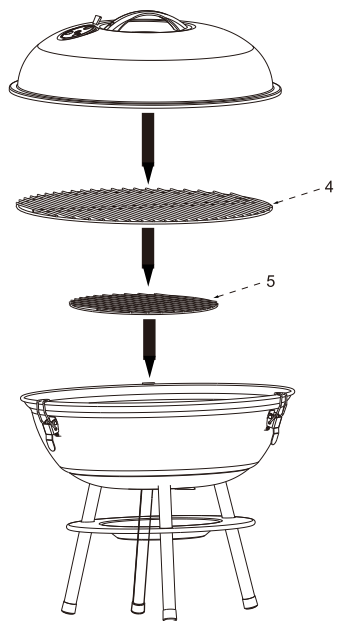

⚠ DANGER

- Do not use gasoline, kerosene or alcohol for lighting. Use only charcoal lighter fluid. Follow manufacturer's instructions.
- Do not add charcoal lighter fluid or charcoal impregnated with charcoal lighter fluid to hot or warm charcoal.
- Do not overfill charcoal tray. Excess charcoal may cause a fire, or may cause damage to your grill.

⚠ DANGER

- Never use water to extinguish charcoal.
- Do not remove ashes until all charcoal is completely burned out or completely extinguished.

AIR VENT OPERATION

Your grill has two airflow control vents; an inlet vent on the bottom of the firebox above the ash collection tray, and an air exhaust vent at the top of the lid. By adjusting the amount of vent opening, you can adjust the temperature of your grill.

⚠ DANGER

- The vents and vent controls and the metal surfaces around them will become very hot during grill use. Use grill mitts or hot pads to adjust vents when grill is in use.