



Traditional Kettle
CTK17U

Cuisinart®

Congratulations on your purchase of the Cuisinart Traditional Kettle.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products visit our website
www.cuisinart.co.uk

Contents

Product Control Guide 4

Important Safety Cautions 5

Safety During Use..... 7

Instructions For Use 8


Hints & Tips..... 9

Cleaning & Maintenance 9

UK Guarantee & After Sales Service 10

UK Wiring Instructions 11

Product Control Guide

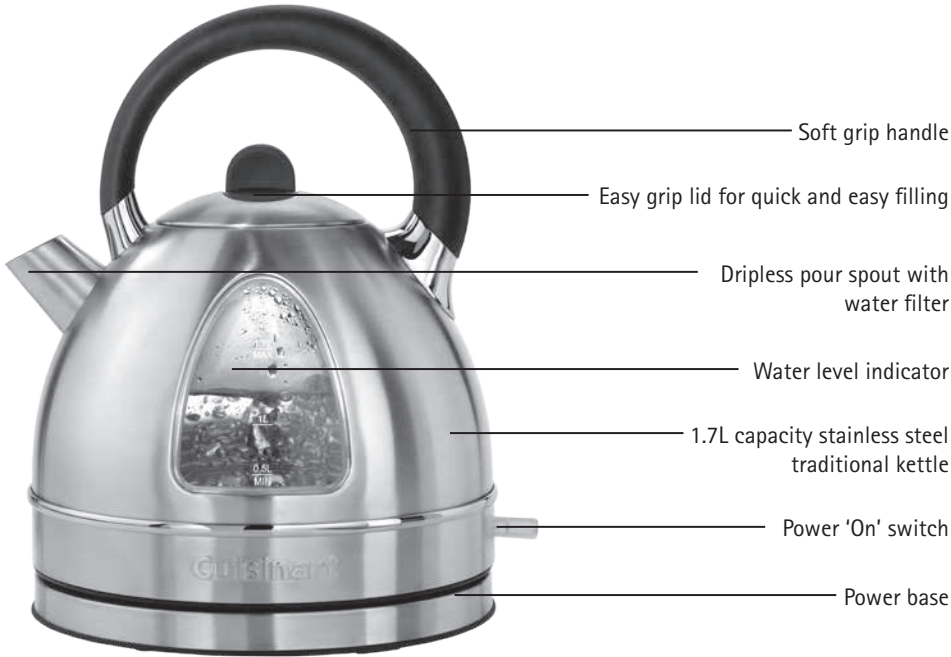

Important Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- The appliance is not intended to be operated by means of external timer or separate remote-control system.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should always be supervised to ensure that they do not play with this product.
- Not for use by children. Keep out of reach of children during and after use.
- Whilst in use the surfaces will become hot. Do not touch hot surfaces. Always use the handle. Take care not to allow these to come into contact with other heat sensitive surfaces.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service" section for further information).
- Ensure all packaging materials and any promotional labels or stickers are removed from the kettle before first use.
- Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.

- Do not use any attachments or accessories other than those recommended or sold by Cuisinart.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not allow the lead to come into contact with hot surfaces.
- Always ensure that your hands are dry before removing the plug from the mains outlet. Never pull the plug out of the mains socket by the lead.
- Do not allow the lead to overhang the edge of a kitchen table or worktop.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or unit in water or other liquids.
- Unplug from the mains when not in use and before cleaning. Allow to cool before cleaning the appliance.
- For indoor, domestic use only.
- Do not wrap the lead around the main body of the appliance during or after use.
- This appliance should be used only for preparation of drinks as described within the instructions for use that accompany it. Please retain these instructions for future reference.
- Always ensure the voltage to be used corresponds with the voltage on the appliance, this is indicated on the bottom of the housing.
- This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001: 2015 accredited company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see "U.K. After Sales Service" section).



WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

Safety During Use

- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not exceed the maximum fill level as clearly marked on the water level indicator. If the kettle is overfilled, boiling water may be ejected.
- The kettle must only be used with the stand provided.
- Do not turn the kettle power on when there is no water in the unit.
- Always close the lid before plugging in and turning on the kettle.
- Whilst in use the surfaces will become hot. Do not touch hot surfaces. Always use the handle.
- Avoid steam from the nozzle and the lid.
- Do not open lid whilst the water is boiling as scalding may occur.
- Ensure that the kettle is switched off before removing the kettle jug from the base.
- Empty the water from the kettle after each use. This is to help prevent build-up of hard water limescale.
- Switch off and unplug the appliance after use.

Instructions For Use

- Before using for the first time we recommend operating the kettle 2 or 3 times. This will remove any dust or residue remaining from its manufacture. Fill to the MAX mark fill level (1.7L), bring to the boil and when boiling has finished and the kettle has switched off, discard the water and rinse out the inside.
- Position the kettle on a flat sturdy surface with the spout facing away from you. Gently lift off the lid, whilst holding the handle.
- Fill the kettle with the required amount of cold water. The water gauge is either side of the kettle and is marked with min and max. Please take care not to exceed the max mark as this may cause spitting from the spout when boiling.
- Position the kettle with the spout facing away from you. Replace lid on kettle.
- Align the kettle over the power base and gently lower it into position; it will find its own way and sit firmly on the base.
- Switch the kettle on by pressing down the power 'On' switch at the rear of the kettle. You will hear a slight click and the switch will illuminate with a blue LED.
- The kettle will switch off automatically when it has finished boiling. However, the kettle can be switched off at any time by simply lifting the power 'On' switch in an upwardly direction. The LED will switch off and the same click will be heard as switching on.
- Pour water out slowly. Return kettle to base after pouring. If you wish to re-boil the water, you must press the power 'On' switch again.

N.B. A couple of water droplets or condensation may appear on the powerbase, this is quite normal and not a leak.

N.B. Do not remove the lid of the kettle when pouring; escaping steam may scald.

- Once the kettle is re-located on the power base, it can be switched on again at any time. If the switch will not stay down it means the control is still a little warm; this is normal and it will simply re-set itself in a few seconds when cooled and will be ready to boil again.

N.B If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.

Hints & Tips

- Always use fresh, cold water each time you boil.

N.B. For your safety, always ensure the lid is on properly when the kettle is in use.

- If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.
- For best results, empty the kettle after each use. Do not leave water standing in the kettle. This is to help prevent build up of hard water limescale.

Cleaning & Maintenance

- Always unplug the appliance from the mains outlet before cleaning.
- Allow to cool before cleaning the appliance.
- Clean the exterior surface of the kettle with a clean damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.
- Clean the water filter with a soft, clean, damp cloth once a month or as necessary.
- Do not use abrasive cleaners or scouring agents of any kind on the interior or exterior of the kettle.

Warning! Do not immerse the kettle or power base in water or other liquid. Ensure the electric kettle socket is kept dry.

Descaling

- To get the best performance from your Traditional Kettle, we recommend descaling it from time to time. Frequency depends on the hardness of your tap water and how often you use it.
- We suggest use of a kettle descaler in order to dissolve the scale. Simply follow the manufacturer's guidelines on the packaging. Alternatively pour in enough white vinegar to cover the bottom of the kettle by about 2cm. Bring the vinegar to the boil; you may need to repeat this several times with cooled vinegar to remove the build-up completely. When the kettle is descaled, empty the kettle and rinse out several times with clean water. Take care not to inhale fumes.

UK Guarantee

This Cuisinart appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. No responsibility will be accepted for any damage caused in transit. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

The return address is:

Customer Care Centre
Conair Logistics
Unit 4 Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW


Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

UK Wiring Instructions

The wires in the mains lead are coloured in accordance with the following code:


- BLUE = NEUTRAL
- BROWN = LIVE
- YELLOW & GREEN = EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L
- The wire which is coloured YELLOW & GREEN must be connected to the terminal which is marked with the letter E or the  symbol

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 13A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 13A fuse must be fitted.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

www.cuisinart.co.uk