




Wine Opener  
CW050U

**Cuisinart®**

# Contents

<b>Product Control Guide .....</b>	<b>3</b>
<b>Important Safety Cautions .....</b>	<b>4</b>
<b>Safety During Use .....</b>	<b>7</b>
<b>Instructions for Use.....</b>	<b>8</b>
A Charging Your Wine Opener .....	8
B Foil Cutter.....	8
C To Operate Your Wine Opener.....	9
D Using the vacuum sealer.....	10
<b>Cleaning &amp; Maintenance .....</b>	<b>10</b>
<b>UK Guarantee &amp; After Sales Service .....</b>	<b>11</b>

# Product Control Guide

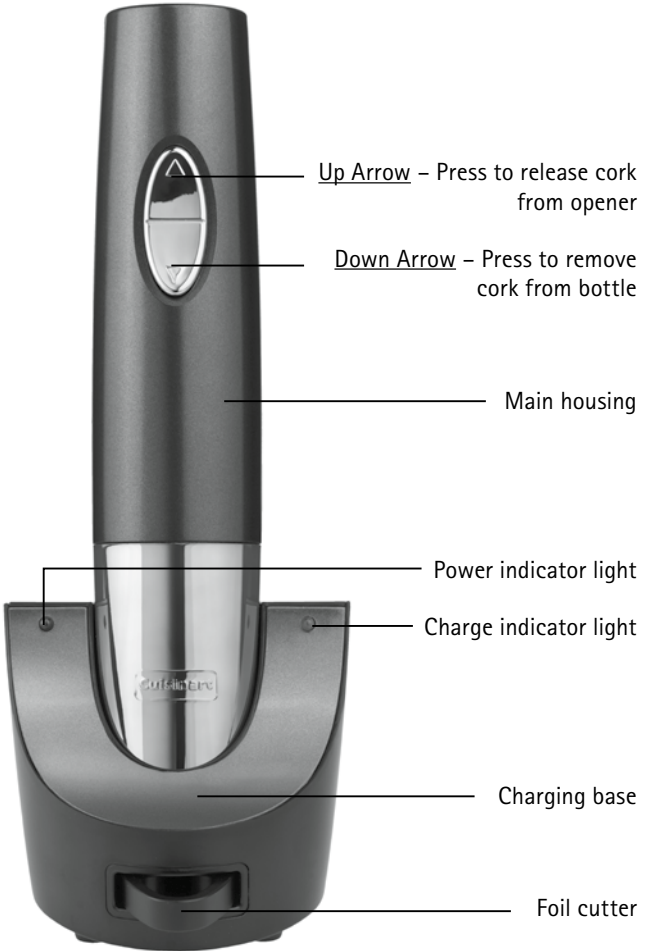

Charging adapter (not shown)

# IMPORTANT SAFETY CAUTIONS

**Carefully read all the instructions before using the appliance and keep in a safe place for future reference.**

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

1. The appliance is not intended to be operated by means of external timer or separate remote control system.
2. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. This appliance shall not be used by children. Keep the appliance, power adapter and charging base out of reach of children during and after use.
4. Always inspect the appliance and appliance accessories before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service section" for further information).
5. Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be

replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.

6. Never pull the plug out of the mains socket by the lead.
7. Never immerse the power adapter, charging base or housing in water or any other liquids.
8. **Caution: The corkscrew is sharp. Handle with care. Keep hands and utensils out of the opening while operating to prevent the possibility of personal injury and/or damage to the product.**
9. Do not wrap the lead around the main body of the appliance during or after use.
10. The appliance is safe to be left plugged into the electrical supply when not in use to ensure the battery is always charged. It should however be unplugged before assembling, disassembling, cleaning or if not being used for a prolonged period of time.
11. This product contains Nickel Metal Hydride batteries that are not to be removed from the appliance for charging. The batteries in this appliance are non-replaceable by the end user. Only an authorised engineer should perform this task for safety reasons.
12. The supply terminals are not to be short circuited.
13. For indoor, domestic use only.
14. For the purpose of recharging the batteries, only use the detachable charging supply unit provided with this appliance (model YLXA-U090008).
15. This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an

ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see "U.K. After Sales Service" section).




**WARNING:** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.



#### **BATTERY DISPOSAL**

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

## Safety During Use

Before first use, remove all packaging materials and any promotional labels or stickers from the Wine Opener.

- Only use the appliance indoors on a solid, level work surface.
- The charger should be plugged into an electrical socket away from a sink or any hot surface.
- Do not use an extension cord. Plug the charger directly into an electrical socket.
- Do not charge the unit using an outdoor socket.
- Use the unit only for its intended use as described in this manual.
- Never insert an object into the Wine Opener corkscrew opening.
- Do not carry the charging base by the cord.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not touch or adjust the Wine Opener's mechanism or the corkscrew spiral. Hold the Wine Opener by its main housing only.
- Never force the Wine Opener onto a bottle or attempt to speed up the mechanism. The Wine Opener will work best when it is operated at its intended speed.

**Caution: The corkscrew is sharp. Handle with care. Keep hands and utensils out of the opening while operating to prevent the possibility of personal injury and/or damage to the product.**

# Instructions for Use

## Before use

We recommend that you charge your electric wine opener for at least eight hours before using for the first time. Please follow the instructions for charging as stated below:

### A Charging Your Wine Opener

Plug the adapter into the back of the charging base and the plug into an electrical outlet. The red power indicator light will illuminate. Place the wine opener into the charging base, making sure that it is firmly in position and that it is fully engaged. The green charge indicator light will flash, indicating that the unit is charging. It will take approximately 6–8 hours to recharge your wine opener. When your wine opener is fully charged, the green light will stop flashing and become a solid green light.

Your wine opener can open approximately 80 bottles of wine on a full charge.

### B Foil Cutter

For your convenience, this unit has a foil cutter, which is stored in the base of the unit. Before removing the cork, you must remove any foil from the bottle. Attach the foil cutter to the top of the wine bottle. Keep your hand on the lower part of the bottle and turn the foil cutter in a twisting motion to remove the foil (see fig 1). The top part of the cork surface will now be exposed.

**CAUTION: The blade on the foil cutter is sharp. Please keep fingers away from the cutter's sharp edges.**





## C To Operate Your Wine Opener

1. Place your bottle of wine on a flat surface and hold the bottle firmly with one hand.
2. Place the wine opener on top of the wine bottle making sure that it remains as straight/upright as possible at all times (see fig. 3). If you hold the wine opener at an angle to the bottle, it will not remove the cork properly.



(Fig. 3)

3. Hold the wine opener firmly and press the lower part of the switch indicated by the down arrow. The corkscrew spiral will turn in an anticlockwise direction and enter the cork, then gradually remove it from the bottle. When the mechanism has stopped, the cork has been fully removed from the bottle.
4. Lift the wine opener up and away from the bottle. To remove the cork, press the upper part of the switch indicated by the up arrow. The spiral will turn in a clockwise direction and release the cork (see fig. 4).



(Fig. 4)

5. After use, we recommend that you return your appliance to the charging base so that it is fully charged and available for use at any time.

#### **D Using the Vacuum Sealer**

1. Place the vacuum sealer on top of the opened wine bottle.
2. Press down on the top of the pump approximately 20 times or until you feel resistance.
3. The top of the vacuum sealer is numbered 1-31 to represent days of the month. Twist the top of the vacuum sealer to the appropriate number to mark the seal date.

**Note: The wine bottle with vacuum sealer must be stored in an upright position. Failure to do so may result in wine leaking from the bottle.**

4. To remove the vacuum sealer from wine bottle, simply pull straight up.

## **Cleaning & Maintenance**

Always unplug the appliance from the electrical outlet before cleaning.

To clean the housing, wipe with a clean, damp cloth.

Never immerse the power adapter, charging base or housing in water or any other liquids.

Never place in a dishwasher. Make sure all the parts are clean and dry before storing.

# UK Guarantee

The Conair Group Ltd, Unit 3 Waterfront Business Park, Fleet, GU51 3TW

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

## Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist\*
3. The appliance is used for professional / non domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk)

## UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk)

Return address:

Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**





IB-18/417A