



CPT780 Series

Cuisinart®

Congratulations on your purchase of the Cuisinart Toaster.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products and for recipe ideas visit our website www.cuisinart.co.uk

Contents

Product Control Guide	4
Important Safety Cautions	5
Instructions for Use	8
Cleaning & Maintenance	9
Guarantee	9
UK After Sales Service	11

Product Control Guide



Important Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book. There is a risk of injury if the product is misused.



- **CAUTION:** Hot surface.
- The temperature of accessible surfaces may be high when the appliance is in use.
- Because the bread can burn, do not use the toaster near or under combustible materials like curtains or under kitchen wall cabinets.
- This appliance is intended for strictly domestic use and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service or a similarly qualified professional to avoid danger.
- This appliance may be used by children aged 8 upwards and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised or instructed on using the appliance safely and understand the hazards involved. The appliance can be cleaned and maintained by children aged over 8 years old, if supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Allow the appliance to cool before storing.
- Never put your hands inside the appliance. Food that is too big, metal packaging or utensils must not be inserted in the toaster. Never attempt to dislodge food when the toaster is plugged into the mains.
- Let the appliance cool down completely and disconnect it before cleaning. Wipe the the outside of the toaster with a clean damp cloth, then dry it carefully. To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place. Do not use the toaster without the crumb

collector. To remove pieces remaining in the toaster, turn it upside down and shake gently to cause the pieces to drop. Never insert a knife or any sharp object in the toaster as this could cause damage.

- Do not place the appliance on or near a hot appliance. Do not use on heat-sensitive surfaces.
- Do not let the cable hang over the edge of the work surface and do not let it touch hot surfaces.
- Do not leave the appliance unattended when on.
- Do not immerse in water or any other liquid.
- Always unplug the appliance after use and before cleaning. Never leave the appliance unattended when plugged in. Pull on the plug to unplug, never on the cable.
- The appliance should not be used with an external timer or with a separate remote control system.
- Only plug the appliance into a socket with a built-in earth. We recommend checking that the electrical installation is equipped with an appropriate residual current device. Ask a service engineer for advice.
- Do not use the appliance if it has fallen or if it looks damaged.
- Do not try to repair the appliance yourself.
- Do not use outdoors.

ELECTRICAL SAFETY

- Always ensure the voltage to be used corresponds with the voltage on the appliance, this is indicated on the bottom of the housing.
- The appliance is not intended to be operated by means of external timer or separate remote-control system.
- Always disconnect the appliance from the electric supply if it is left unattended and before assembling, disassembling or cleaning.
- Never pull the plug out of the mains socket by the supply cord.
- Always ensure that your hands are dry before touching the supply cord or removing the plug from the mains socket.



WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see "U.K. After Sales Service" section).



Disposing of electrical and electronic appliances at the end-of-life

This symbol on the product or on the packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the appliance collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

Instructions For Use

- Place the toaster on a flat, even surface.
- Check that the crumb collector is installed in the appliance.
- Insert bread in the slots and push the lever.
- To stop the toaster before the end of the cycle, press the Cancel button.

A. SETTING THE BROWNING LEVEL OF THE SLICE

Turn the control dial to the desired toasting level. The browning of your bread slices varies depending on the type of bread and degree of humidity of the slices. As a general rule, for medium toasting, set your toaster on level 4-5 to toast denser bread or fresh bread and on 2-3 for toasting stale bread.

B. USING THE VARIOUS SETTINGS

By using the various settings Cancel (⊗ symbol), Defrost (✱ symbol) and Reheat (⚡ symbol), you adjust the necessary time depending on the type of bread and the desired toasting level. Each setting can be combined with the browning level control dial. A light indicator shows the selected setting. **N.B.** If you wish to cancel the selection, press the Cancel button. This will stop the cycle and raise the bread slices.

Hints & Tips

- Bread rolls, muffins or thick slices should be toasted longer.
- To toast croissants, cut them in half horizontally. To reheat them only, use the setting.
- When toasting fruit breads, remove any loose fruits from the surface of the bread in order to prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.
- If you are toasting a single slice of bread, set the heat selector to a lighter setting than you normally would.

Cleaning & Maintenance

- Always disconnect the toaster from the mains immediately after use and allow to cool completely before cleaning.
- Do not immerse the appliance in water or any other liquid or place in a dishwasher.
- Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Always apply any cleaning agent to a cloth, not to the toaster.
- To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place.
- To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake.
- Never wrap the cord around the outside of the toaster.

IMPORTANT:

Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard.

Guarantee

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non-domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email support@cuisinart.co.uk for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

www.cuisinart.co.uk