



4 Slice Toaster
CPT450BPU

Cuisinart®

Congratulations on your purchase of the Cuisinart 4 Slice Toaster.

 
For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products visit our website www.cuisinart.co.uk

Contents

Product Control Guide	4
Important Safety Cautions	5
Instructions for Use	8
A Before First Use.	8
B Toasting.	8
C Defrost Setting	9
D Reheat Setting	9
E Bagel Setting	10
F Toasting - Hints & Tips.	11
G Crumb Trays.	11
Cleaning & Maintenance.	12
UK Guarantee	13
UK After Sales Service	13
UK Wiring Instructions.	14


Product Control Guide

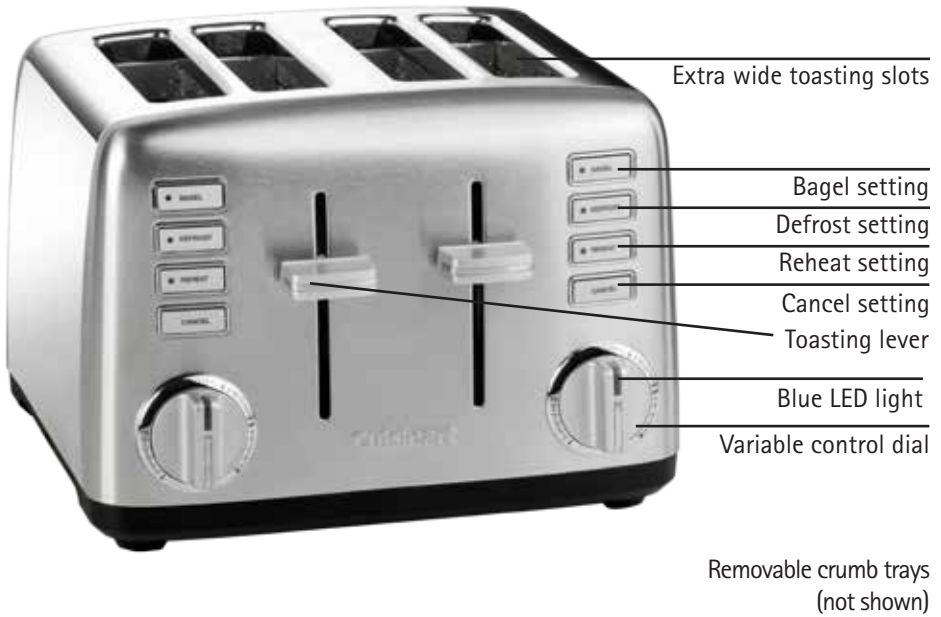

Important Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

1. The appliance is not intended to be operated by means of external timer or separate remote-control system.
2. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should always be supervised to ensure that they do not play with this product.
4. Not for use by children. Keep out of reach of children during and after use.
5. The temperature of all surfaces marked with this symbol will be very hot when the appliance is in use. **DO NOT TOUCH** these surfaces as possible injury could occur. Always allow to cool completely before handling this appliance. 
6. As the outer surfaces may get hot when the appliance is in use, take care not to allow these to come into contact with other heat sensitive surfaces.
7. Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service" section for further information).
8. Ensure all packaging materials and any promotional labels or stickers are removed from the toaster before first use.
9. Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for

- further information). No repair must be attempted by the consumer.
10. Bread may burn, therefore DO NOT position the toaster near or below curtains or other combustible materials.
 11. Do not use any attachments other than those recommended or sold by Cuisinart.
 12. Do not place on or near a hot gas or electric burner, or in a heated oven.
 13. Do not allow the lead to come into contact with hot surfaces.
 14. Never pull the plug out of the mains socket by the lead.
 15. Do not allow the lead to overhang the edge of a kitchen table or worktop.
 16. Unplug from the mains when not in use and before cleaning. Allow to cool before cleaning the appliance.
 17. For indoor, domestic use only.
 18. Do not wrap the lead around the main body of the appliance during or after use.
 18. Always ensure the voltage to be used corresponds with the voltage on the appliance, this is indicated on the bottom of the housing.
 19. This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Electrical Safety of Domestic Appliances).



WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

Safety During Use

- To protect against fire, electric shock or personal injury, do not immerse cord, plug or the toaster in water or other liquids.
- Do not place metallic packaging, paper, cardboard, plastic or any utensils in the toaster as they may cause a risk of fire or electric shock.
- Do not cover crumb trays or any part of the toaster with metal foil. This will cause overheating of the toaster.
- Never put your hands inside the toaster.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not attempt to dislodge food when the toaster is plugged into a mains socket.
- Always ensure that your hands are dry before removing the plug from the mains socket.

WARNING: To avoid possibility of fire, do not leave the toaster unattended during use.

- If the carriage control lever becomes jammed during the toasting cycle, do not try to release it. Switch off the power at the mains (if appropriate), unplug the toaster and leave it to cool down before carefully removing the bread. Do not use a knife, fork or other sharp implement as this may damage the element.
- Do not toast 'battered' items or try to make toasted sandwiches in the toaster, as this will create a fire hazard.
- Do not use very thin, torn or curled up slices of bread as these could jam the eject mechanism.
- Only use the toaster with the crumb tray in place.
- Do not insert (by force) foods that are too big for the slots.

Instructions for Use

 
A Before First Use

- Remove all packaging from the product and unwind the power cord.
- Check that the crumb trays are in place (see section G Crumb Trays for more details)
- Check that the toaster slots are empty.
- Plug the power cord into the mains socket and switch on.
- Before first use, we recommend that you set the browning level to 6 on both pairs of toasting slots using the control dial and operate the toaster without any bread to burn off any dust from the new elements. There may be a distinctive smell – this is quite normal.

B Toasting

Your toaster has been specially designed with an extra wide, extra deep toasting carriage to accommodate and evenly toast most types of breads.

- Ensure the toaster is plugged into the mains socket and the toasting lever is in the up position.
- Both pairs of toasting slots are independently controlled, so you can select different browning settings for each pair of slots.
- Select the browning level using the control dial (1 is the lightest and 6 is the darkest setting). You can select a position part way between the settings for total control. Ensure the LED light (this will not be illuminated at present) is pointing towards the setting you desire (see fig 1. below)

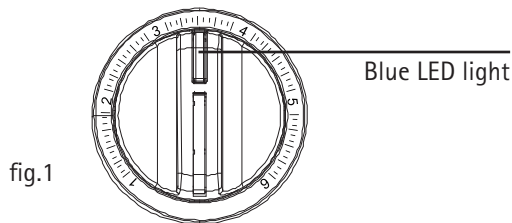

NB. Toasting is a combination of cooking and drying of the bread, therefore differences in moisture levels from one bread to another can lead to varying toasting results.

- Insert slice(s) of bread.

NB. Never force foods into the toasting slot. Foods should fit freely between the guides.

- Press the toasting lever(s) down until it locks into position. It will only lock into position if the toaster is connected to the mains socket.
- The LED light on the control dial(s) will illuminate. Ensure the blue light is pointing towards the setting you desire.
- When the cycle is complete, the toaster will automatically raise the bread.
- The lever can be raised further to allow you to remove smaller breads e.g. bagels, crumpets more easily.
- If you wish to stop the cycle before it has finished, simply press the 'Cancel' button(s).
- After use, unplug the toaster from the mains socket.

C Defrost Setting

The Defrost setting is designed to first defrost and then toast the bread in one automatic cycle.

- Ensure the toaster is plugged into the mains socket and the toasting lever is in the up position.
- Select the browning level using the control dial.
- Press the lever down until it locks into position.
- Press the 'Defrost' button(s). The blue light on the button indicates the feature is activated.

NB. The button can only be activated once the lever is down.

- When the cycle is complete, the toaster will automatically raise the bread.

D Reheat Setting

The reheat setting allows you to reheat your toast without further browning or toasting.

- Ensure the toaster is plugged into the mains socket and the toasting lever is in the up position.
- Insert slice(s) of toast. Only reheat plain, unbuttered toast.
- Press the lever down until it locks into position. It is not necessary to adjust the browning control.
- Press the 'Reheat' button(s). The blue light on the button indicates the feature is activated.

 
NB. The button can only be activated once the lever is down.

- The Reheat cycle lasts approximately 30 seconds. When the cycle is complete, the toaster will automatically raise the bread.

E Bagel Setting

The Bagel setting toasts one side of the bread and warms the other, ideal for bagels. It also adds extra time to the toasting cycle to accommodate the thickness of bagels.

- Slice your bagel into 2 equal halves. Place each half into 2 of the slots with the cut sides facing each other. There is a bagel symbol on the top face of the toaster to illustrate which way the bagels should be inserted (see fig.2 below).
 - Select the browning level using the control dial.
 - Press the lever down until it locks into position.
 - Press the 'Bagel' button(s). The blue light on the button indicates the feature is activated.
- NB.** The button can only be activated once the lever is down.
- NB.** If you wish to defrost bagels, ensure the defrost button is also pressed. This will extend the toasting cycle further.
- NB.** If you wish to reheat bagels, ensure the bagel button is pressed first, followed by the reheat button.
- When the cycle is complete, the toaster will automatically raise the bagel(s).

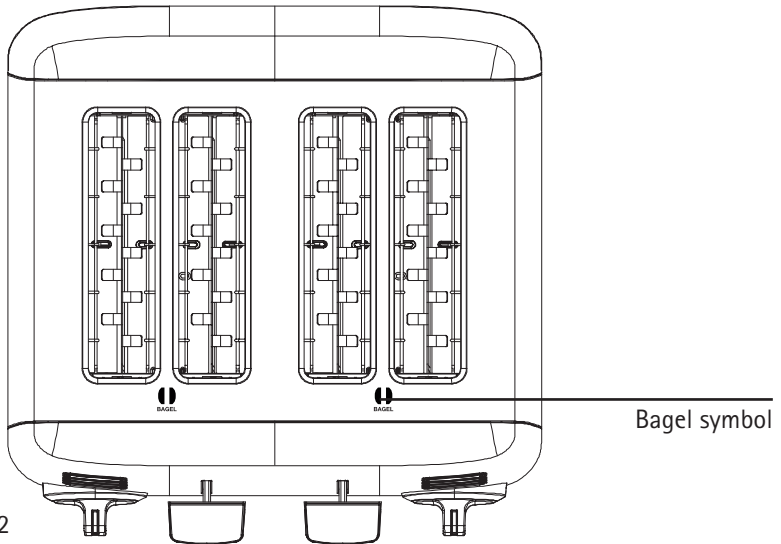

F Toasting – Hints & Tips

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces will require a higher toast setting.
- Thick cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can begin. Very thick pieces may even require 2 cycles.
- Sweet bread products e.g. tea cakes, fruit loaf etc. brown more quickly than ordinary bread, so it is best to use a lower setting.
- When toasting raisin or other fruit breads, remove any loose raisins etc. from the surface of the bread before toasting. This will help to prevent fruit pieces from falling into the toaster or sticking to the guide wires in the slot.
- If you are toasting a single slice of bread, set the browning setting at a lower level than normal. The toaster is designed to heat the whole toasting chamber, so by lowering the heat for a single slice, you will not over toast.
- It is possible to use the toaster for toaster pastries. You should only use pastries which are specifically designed for use with a toaster, and you should always follow the instructions provided by the manufacturer of the pastry. Take extra care when toasting pastries. The filling can become very hot long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

G Crumb Trays

The toaster is equipped with two removable crumb trays to collect crumbs during toasting. We recommend that the crumb trays are removed and emptied on a regular basis.

- To empty, locate the trays which are fitted in the base of the toaster. They can be accessed from the rear of the toaster.
- Pull the black cover on each tray, and the tray(s) will slide out. Discard the crumbs and replace by sliding back into position. Never operate the toaster without the crumb tray in place.

Cleaning & Maintenance

- Always disconnect the toaster from the mains immediately after use and allow to cool completely before cleaning.
- Do not immerse the appliance in water or any other liquid or place in a dishwasher.
- Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Always apply any cleaning agent to a cloth, not to the toaster.
- To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake.
- Never wrap the cord around the outside of the toaster.

IMPORTANT:

- Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard.

UK Guarantee

This Cuisinart appliance is guaranteed for consumer use for 5 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. No responsibility will be accepted for any damage caused in transit. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice. This guarantee in no way affects your statutory rights.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

The return address is:

Customer Care Centre
Conair Logistics
Unit 4 Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW


Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

UK Wiring Instructions

The wires in the mains lead are coloured in accordance with the following code:

- BLUE = NEUTRAL
- BROWN = LIVE
- YELLOW & GREEN = EARTH


As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L
- The wire which is coloured YELLOW & GREEN must be connected to the terminal which is marked with the letter E or the  symbol

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 13A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 13A fuse must be fitted.

WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock hazard). Ensure that the cut off plug is disposed of safely.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

www.cuisinart.co.uk