



RWO100U

**Cuisinart®**

Congratulations on your purchase of the Cuisinart Wine Opener.



For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products and for recipe ideas visit our website [www.cuisinart.co.uk](http://www.cuisinart.co.uk)

# Contents

Product Control Guide .....	4
Important Safety Cautions .....	5
Instructions for Use.....	8
Cleaning & Maintenance .....	9
Guarantee.....	10
UK After Sales Service .....	11

# Product Control Guide

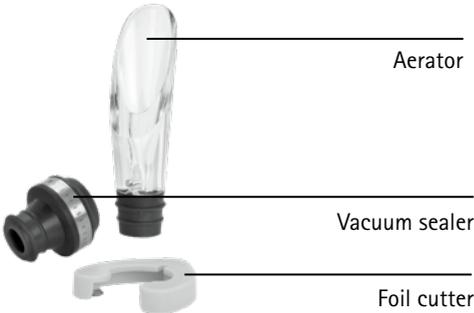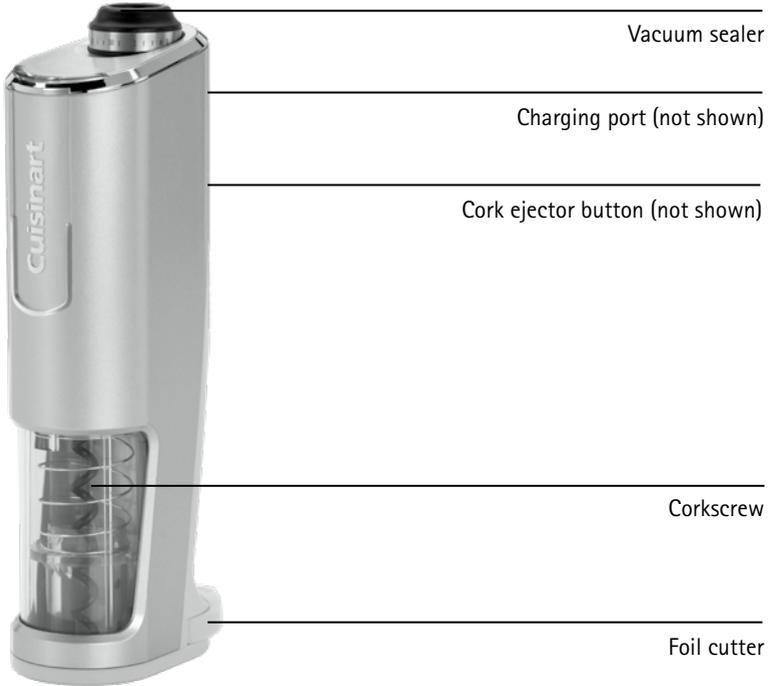

USB lead and charging adaptor

# Important Safety Cautions

**Carefully read all the instructions before using the appliance and keep in a safe place for future reference.**

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book. There is a risk of injury if the product is misused.

1. This appliance is for domestic use only and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by customers in hotels, motels and other residential type environments; bed and breakfast type establishments.
2. Care should be taken during use and cleaning.
3. **Caution:** The corkscrew is sharp. Handle with care. Keep hands and utensils out of the opening while operating to prevent the possibility of personal injury and/or damage to the product.
4. The appliance is not intended to be operated by means of external timer or separate remote control system.
5. Not for use by children aged less than 8 years. Keep the appliance and its supply cord out of reach of children under 8 years old during and after use. Cleaning and maintenance shall not be made by children unless they are older than 8 and supervised. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children should always be supervised to ensure that they do not play with this appliance
6. Always inspect the appliance and appliance accessories before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service section" for further information).
7. Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
8. Never pull the plug out of the mains socket by the lead.

9. Do not wrap the lead around the main body of the appliance during or after use.
10. The appliance is safe to be left plugged into the electrical supply when not in use to ensure the batteries are always charged. It should however be unplugged before assembling, disassembling, cleaning or if not being used for a prolonged period of time.
11. This product contains a Lithium Ion rechargeable battery that is not to be removed from the appliance for charging. The batteries in this appliance are non-replaceable.
12. The supply terminals are not to be short circuited.
13. **WARNING:** For the purposes of recharging the battery, only use the detachable charging supply unit provided with this appliance. **WARNING:** For the purposes of recharging the battery, only use the detachable charging supply unit provided with this appliance (model C050100-EU/BS).  This symbol indicates there is a detachable power supply for means of charging.
14. This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see "U.K. After Sales Service" section).
15. **WARNING:** Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from the corkscrew during operation to reduce risk of injury to persons, and/or damage to the appliance.
16. **WARNING:** Do not put fingers near the corkscrew spiral – the end is sharp
17. The charger should be plugged into an electrical socket away from a sink or any hot surface.
18. Do not use an extension cord. Plug the charger directly into an electrical socket.
19. Do not charge the unit using an outdoor socket.
20. To protect against electrical shock, do not put the main unit in water or other liquids.



**WARNING:** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

## BATTERY DISPOSAL

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent in order to remove the batteries and for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

## Safety During Use

Before first use, remove all packaging materials and any promotional labels or stickers from the Wine Opener.

- Only use the appliance indoors on a solid, level work surface.
- Use the unit only for its intended use as described in this manual.
- Never insert an object into the Wine Opener corkscrew opening.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not touch or adjust the Wine Opener's mechanism or the corkscrew spiral. Hold the Wine Opener by its main housing only.
- Never force the Wine Opener onto a bottle or attempt to speed up the mechanism. The Wine Opener will work best when it is operated at its intended speed.

**CAUTION:** The corkscrew is sharp. Handle with care. Keep hands and utensils out of the opening while operating to prevent the possibility of personal injury and/or damage to the product.

# Instructions For Use

## Before use

### A. Charging Your Wine Opener

The batteries in your wine opener have not been fully charged. Before using, the batteries must be charged until all three blue lights are illuminated. With a full charge, your wine opener will open around 50 bottles of wine. Your wine opener will be fully charged in approximately 2.5 hours.

N.B. To charge the main unit, insert the Micro USB end of charging lead into the charging port at the back of the main unit. Plug the USB end directly into the adapter plug and then into a mains supply outlet.

### Battery Life Indicator Lights

The indicator lights will flash blue, when the battery is being charged. When all three lights are illuminated, this means the battery is fully charged and is then ready to use. As the battery starts to run down, the indicator lights will turn off. The battery will need to be recharged when the last indicator light is flashing. If the battery has completely run down on the unit, it will not operate.

**N.B:** The Wine Opener cannot be used while it is plugged in and charging.

### B. Foil Cutter

For your convenience, this unit has a foil cutter, which is stored in the base of the unit. Before removing the cork, you must remove any foil from the bottle. Attach the foil cutter to the top of the wine bottle. Keep your hand on the lower part of the bottle and turn the foil cutter in a twisting motion to remove the foil. The top part of the cork surface will now be exposed.

**CAUTION:** The blade on the foil cutter is sharp. Please keep fingers away from the cutter's sharp edges.

### C. To Operate Your Wine Opener

1. Place your bottle of wine on a flat surface and hold the bottle firmly with one hand. N.B The Wine Opener can be used to remove natural or synthetic corks.
2. Place the Wine Opener on top of the wine bottle making sure that it remains as straight/upright as possible at all times. If you hold the Wine Opener at an angle to the bottle, it will not remove the cork properly.
3. Hold the Wine Opener firmly and gently push down on the top of the bottle. The corkscrew will start automatically and will turn in an anticlockwise direction to gradually remove the cork. When the mechanism has stopped, the cork has been fully removed.

4. Lift the Wine Opener up and away from the bottle. The corkscrew will then automatically turn in a clockwise position to release the cork.

**N.B:** If the cork becomes stuck and isn't removed automatically, there is a small button located underneath the USB cover which can be used to remove the cork. Simply press it once to turn it on. Once the cork is removed, press the button again to turn the corkscrew off.

#### **D. Using the Aerator**

The aerator is perfect for quickly and easily pouring your wine, exposing it to more air and letting the wine breathe as you pour. This will improve the flavour your wine.

The aerator provided is neatly stored at the back of the main unit. To use, lift off from its stand and place the rubber end into your open bottle of wine before pouring.

#### **E. Using the Vacuum Sealer**

The vacuum sealer is ideal for preserving opened bottles of wine. To use:

1. Place the smaller end of the vacuum sealer into the top of the opened wine bottle.

**Note:** The wine bottle with vacuum sealer must be stored in an upright position. Failure to do so may result in wine leaking from the bottle.

2. Using the silver date band, twist until the arrow is lined up with the date you opened the bottle. This provides a helpful reminder so you know how long the bottle has been open.

3. To remove the vacuum sealer from wine bottle, simply pull it straight up.

4. When not in use, the vacuum sealer can be stored in the top of the Wine Opener

## **Cleaning & Maintenance**

Always unplug the appliance from the electrical outlet before cleaning. To clean the housing, wipe with a clean, damp cloth. Never immerse the power adapter, unit in water or any other liquids. Never place in a dishwasher. The aerator and vacuum sealer can be washed by hand in warm soapy water. Make sure all the parts are clean and dry before storing.

## Guarantee

This appliance is guaranteed for consumer use for 2 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

## Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist\*
3. The appliance is used for professional / non-domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk)

## **UK After Sales Service**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk)

Return address:

Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**

[www.cuisinart.co.uk](http://www.cuisinart.co.uk)