



Burr Mill  
DBM8U

**Cuisinart®**



Congratulations on your purchase of the Cuisinart Burr Mill.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products and for recipe ideas visit our website [www.cuisinart.co.uk](http://www.cuisinart.co.uk)

# Contents

<b>Product Control Guide .....</b>	<b>5</b>
<b>Important Safety Cautions .....</b>	<b>6</b>
<b>Instructions for Use.....</b>	<b>8</b>
A Preparing the Grinder.....	8
B Using the Grinder .....	9
C Disassembling the Bean Hopper.....	9
<b>Hints &amp; Tips.....</b>	<b>10</b>
<b>Cleaning &amp; Maintenance .....</b>	<b>10</b>
<b>UK Guarantee &amp; After Sales Service .....</b>	<b>11</b>
<b>Wiring Instructions.....</b>	<b>13</b>

# Product Control Guide



## Important Safety Cautions

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance.

This appliance should be used only as described within this instruction book. Please keep this instruction book for future reference.

- Ensure all packaging materials and any promotional labels or stickers are removed from the Burr Mill before first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (see "UK After Sales Service" section).
- Do not use this appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by a special lead available from the manufacturer or its service agent, see "UK After Sales Service" section.
- Do not immerse motor unit in water or any other liquid or put in a dishwasher.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should always be supervised to ensure that they do not play with this product.
- Not for use by children. Keep out of reach of children during and after use.
- Always disconnect the appliance immediately after use and before cleaning.
- Never leave the appliance unattended when plugged in.
- Never pull the plug out of the mains socket by the lead.
- Do not allow the lead to overhang the kitchen table or worktop.
- Avoid contact between the lead and hot surfaces.

- For indoor and domestic use only.
- Always ensure that your hands are dry before removing the plug from the mains socket.
- Always ensure the voltage to be used corresponds with the voltage on the appliance, which is indicated on the bottom of the motor unit.
- Do not use any attachments other than those recommended or sold by Cuisinart.
- Do not touch moving parts whilst in use.
- This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see "U.K. After Sales Service" section).



**WARNING:** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

# Instructions for Use

## A Preparing the Grinder

- Remove all packaging and plug the appliance into a suitable mains socket.
  - Remove the bean hopper lid and ensure that the bean hopper is securely in place.
  - Fill the bean hopper with beans, making sure that the lid closes securely (see figure 1).
- N.B. (Maximum fill is 250g).**

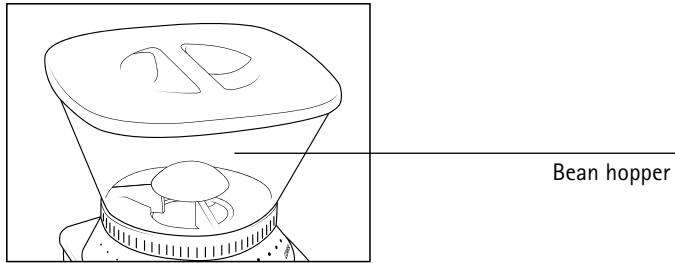 


Figure 1

- Set the grind selector to the desired setting, then twist the bean hopper in a clockwise or anticlockwise direction. The 'I' mark on the hopper base should be aligned with the desired grind setting (see figure 2).

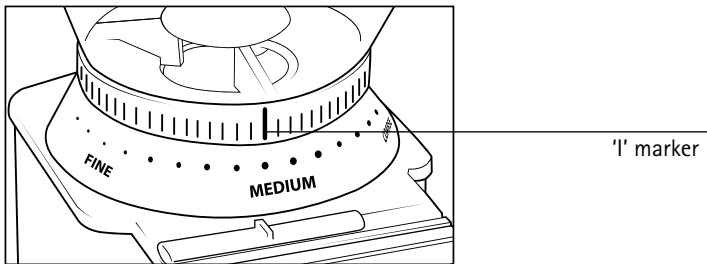 


Figure 2



- Slide the cup quantity selector to the desired number of cups, between 4 and 18. (see figure 3).

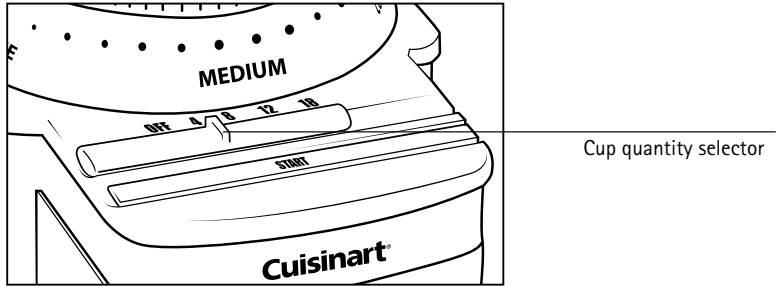 


Figure 3

## B Using the Grinder

- Press and release 'START' button to begin grinding.  
N.B. If the bean hopper and grind chamber are not properly in place, the grinder will not operate.
- Grinding will automatically stop once the pre-set quantity of beans have been ground.
- To manually stop the operation, slide the cup quantity selector all the way to the left to the 'OFF' position and the appliance will stop. To restart, reposition the cup quantity selector to the desired number of cups and press and release the 'START' button.
- To remove the grind chamber, simply pull away from the mains unit. Always ensure the motor has stopped completely before removing any parts. The coffee can be used or stored with the grind chamber lid fitted, ready for use.

## C Disassembling the Bean Hopper

- To remove the bean hopper from the main unit turn it in an anti-clockwise direction until it becomes loose enough to remove. To reinstate, reverse the action (see figure 4).

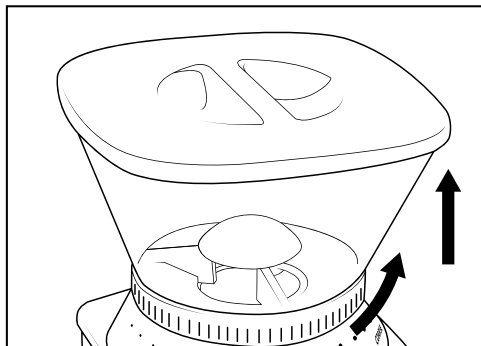 


Figure 4

## Hints & Tips

- The following table highlights the general grind settings required for basic types of coffee. As there are 6 settings per grind type, you will have to experiment with different grind settings to determine the right consistency to suit your taste.

Grind Position	Grind Result
Coarse	Percolator/Cafetière
Medium	Filter
Fine	Espresso

- When choosing fine settings, you may need to set the cup selector at a higher number of cups to get the desired amount of coffee, as fine grinds are very compact.
- When choosing coarse settings, you may need to set the cup selector at a lower number of cups to get the desired amount of coffee, as coarse grinds are very loose.
- You may also vary the strength of the coffee by increasing or decreasing the quantity of cups, i.e. select a greater quantity than actually required for a stronger flavour and vice versa.

## Cleaning & Maintenance

- Always ensure the plug has been removed from the mains before cleaning.
- The bean hopper and grind chamber are dishwasher safe, and we recommend washing them on the top rack of the dishwasher. Due to high water temperature, washing these parts on the bottom rack may cause damage over time.
- Never immerse the housing base in water or other liquid.
- Do not use abrasive cleaners on the housing base. To clean, simply wipe with a damp cloth and dry thoroughly. Apply any cleaning agent to the cloth, not directly to the housing base.
- Use the cleaning brush provided to clean the grind release area.
- Use the cord wrap on the underside of the housing base to store excess cord.

## UK Guarantee

The Conair Group Ltd, Unit 3 Waterfront Business Park, Fleet, GU51 3TW

This appliance is guaranteed for consumer use for 5 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

### Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist\*
3. The appliance is used for professional / non domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk) for further information on authorised stockists. **It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk)

## **UK After Sales Service**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk)

Return address:

Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.


**Please note this Instruction Booklet is not the guarantee.**

# UK Wiring Instructions

The wires in the mains lead are coloured in accordance with the following code:


- BLUE = NEUTRAL
- BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  symbol

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 3A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 3A fuse must be fitted.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.





[www.cuisinart.co.uk](http://www.cuisinart.co.uk)