



RHM100U

Cuisinart®

Congratulations on your purchase of the Cuisinart Hand Mixer.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products and for recipe ideas visit our website www.cuisinart.co.uk

Contents

| | |
|---------------------------------|----|
| Product Control Guide | 4 |
| Important Safety Cautions | 5 |
| Instructions for Use..... | 8 |
| Cleaning & Maintenance | 10 |
| Guarantee..... | 11 |
| UK After Sales Service | 12 |

Product Control Guide



Beaters

Indicator Lights

Speed Setting Button

On / Off Switch

Main Unit / Handle

Charging port (not shown)




USB lead and adaptor

Important Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book. There is a risk of injury if the product is misused.

1. This appliance is for domestic use only and is not intended to be used in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by customers in hotels, motels and other residential type environments; bed and breakfast type establishments.
2. Care should be taken when handling the attachments, during use and cleaning.
3. The appliance is not intended to be operated by means of external timer or separate remote control system.
4. Not for use by children aged less than 8 years. Keep the appliance and its supply cord out of reach of children under 8 years old during and after use. Cleaning and maintenance shall not be made by children unless they are older than 8 and supervised. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children should always be supervised to ensure that they do not play with this appliance
5. Always inspect the appliance and appliance accessories before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service section" for further information).
6. Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
7. Never pull the plug out of the mains socket by the lead.
8. Do not wrap the lead around the main body of the appliance during or after use.

9. The appliance is safe to be left plugged into the electrical supply when not in use to ensure the batteries are always charged. It should however be unplugged before assembling, disassembling, cleaning or if not being used for a prolonged period of time.
10. This product contains a Lithium Ion rechargeable battery that is not to be removed from the appliance for charging. The batteries in this appliance are non-replaceable.
11. The supply terminals are not to be short circuited.
12. **WARNING:** For the purposes of recharging the battery, only use the detachable charging supply unit provided with this appliance (model C050200-EU/BS).  This symbol indicates there is a detachable power supply for means of charging.
13. This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see "U.K. After Sales Service" section).
14. **WARNING:** Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from attachments during operation to reduce risk of injury to persons, and/or damage to the appliance. A spatula may be used, but only when the unit is not operating.
15. **WARNING:** Do not put fingers near the attachments. To dislodge food ensure mixer is not in operation first.
16. The charger should be plugged into an electrical socket away from a sink or any hot surface.
17. Do not use an extension cord. Plug the charger directly into an electrical socket.
18. Do not charge the unit using an outdoor socket.
19. To protect against electrical shock, do not put the main unit in water or other liquids. Only the attachments, of this appliance, have been designed for submersion in water or other liquids. Never submerge any other portion of this unit. If the hand mixer falls into liquid, remove immediately, clean and dry the unit thoroughly before continuing.




WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

BATTERY DISPOSAL

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent in order to remove the batteries and for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

Safety During Use

Before first use, remove all packaging materials and any promotional labels or stickers from the Hand Mixer.

- The charger should be plugged into an electrical socket away from a sink or any hot surface.
- Do not use an extension cord. Plug the charger directly into an electrical socket.
- Do not charge the unit using an outdoor socket.
- To protect against electrical shock, do not put the main unit in water or other liquids. If the hand mixer falls into liquid, remove immediately, clean and dry the unit thoroughly before continuing.
- To avoid splashing, always insert the beaters into the mixture before activating, and press the 'On/Off' button before removing.

- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce risk of injury to persons, and/or damage to the appliance. A spatula may be used, but only when the unit is not operating.
- **WARNING:** When mixing hot ingredients, use a much larger container or process smaller quantities. Use extra care when working with hot liquids to avoid injury from overflowing, sudden steaming and splattering. In order to avoid scalds from steam, it may be advisable to angle the mixer slightly so that your hand is not directly above the steam.
- Do not use this hand mixer for anything other than its intended use of preparing foods and beverages.

Instructions For Use

Before first use, we recommend that you wipe the main unit with a clean, damp cloth to remove any dirt or dust. Dry it thoroughly with a soft absorbent cloth. Carefully clean the beaters in warm soapy water.

N.B. Do not use abrasive cleaners, hard implements or a scourer.

A. Charging the Hand Mixer

The batteries in your hand mixer have not been fully charged. Before using, the batteries must be charged until all three blue lights are illuminated. With a full charge, your hand mixer will run continuously for approximately 20 minutes, depending on the recipe. Your hand mixer will be fully charged in approximately 2 hours and 10 minutes.

N.B. To charge the main unit, insert the Micro USB end of charging lead into the charging port at the back of the main unit. Plug the USB end directly into the adapter plug and then into a mains supply outlet.

Battery Life Indicator Lights

The indicator lights will flash blue when the battery is being charged. When all three lights are illuminated, this means the battery is fully charged and is then ready to use. As the battery starts to run down, the indicator lights will turn off. The battery will need to be recharged when the last indicator light is flashing. If the battery has completely run down on the unit, it will not operate.

N.B. The Hand Mixer cannot be used while it is plugged in and charging.

B. Assembly

Turn the main unit so the handle is facing away from you and you can see the beater connection points. Insert the beater with the extra disc on the stem into the left slot, push until it clicks into place see fig.1. Insert the other beater into the right hand slot and push until clicked into place.

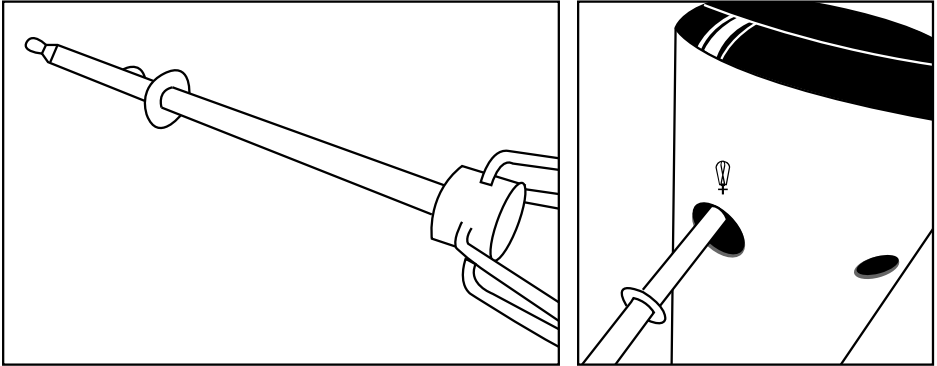


fig.1.

C. Removing the Beaters

To remove, simply pull the beaters out of the unit one at a time.

D. To Operate Your Hand Mixer

1. Press and hold the power button until the screen illuminates. Then immediately press the speed selector button once, to start the unit on speed 1.
2. To change the speed, press the speed selector button again until desired speed is reached – there are 5 speed settings. The speed settings are looped, so if the speed selector is pressed again when on speed 5 it will return to 0 and stop. Simply press again to reach speed 1 and then continue to press the speed selector button until the desired speed is reached.
3. To stop the hand mixer when on any speed press the power button.

N.B. If the mixer is left on speed zero for more than 1.5 seconds the unit will turn off.

WARNING: Keep hands, hair, clothing, as well as spatulas and other utensils away from the beaters during operation to reduce risk of injury to persons, and/ or damage to the appliance. A spatula may be used, but only when the unit is not operating.

E. Hints & Tips

- When beating egg whites, use a very clean metal or glass bowl. To help stabilize the egg whites, add 1/8 teaspoon of cream of tartar per egg white, prior to beating them. Beat the egg whites until desired peaks form.
- Beating egg whites for too long causes them to dry out and become less stable.
- When adding sugar to beaten egg whites, add it slowly, when soft peaks just begin to form and then continue beating to form desired peaks.
- When beating heavy cream, if possible and time allows, use a chilled bowl and chill the beaters. The best shaped bowl for whipping cream is one that is deep with a rounded bottom to minimize any splatter.
- The cream should come out of the fridge just before whipping. Whipped cream may be used at either soft or firm peaks depending on preference. It may be flavoured as desired. For best results, whip cream just before using.
- **Caution:** Do not immerse the product in water or any other liquid, only the beater attachments can be submerged.

Cleaning & Maintenance

The appliance should always be cleaned thoroughly after each use. Always unplug the appliance from the electrical outlet before cleaning. To clean the main unit, wipe with a clean, damp cloth. The beaters can be removed and washed by hand in warm soapy water or on the top rack of a dishwasher. Never immerse the power adapter in water or any other liquids.

Guarantee

This appliance is guaranteed for consumer use for 2 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non-domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email support@cuisinart.co.uk for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and not from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

www.cuisinart.co.uk