



One Cup Grind and Brew
DGB1U

Cuisinart®

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. The appliance is not intended to be operated by means of external timer or separate remote-control system.
2. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should always be supervised to ensure that they do not play with this product.
4. Not for use by children. Keep out of reach of children during and after use.
5. Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. Do not use this appliance if the lead is damaged. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service" section for further information).

Congratulations on your purchase of the Cuisinart One Cup Grind and Brew Coffee Machine.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products and for recipe ideas, visit our website www.cuisinart.co.uk


Contents

A.	Product Description	5
	Safety Cautions & Wiring Instructions	6
B.	Before First Use	9
C.	Brewing Coffee Using Beans	10
D.	Brewing Coffee Using Pre - Ground Beans	13
E.	Cleaning & Maintenance.	15
F.	Troubleshooting	16
	UK Guarantee	17
	UK After Sales Service	17

A. Product Description



Charcoal Water Filter and Holder

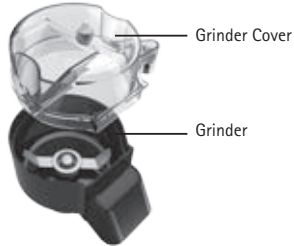

Includes spoon, plastic drip tray cover and 100 x No. 2 paper filters (not shown)

Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, remove the plug from the mains then contact the Cuisinart Customer Care Line (see "UK After Sales Service" section).
- Do not use this appliance if the lead is damaged. In the event of a damaged lead discontinue use immediately. Contact the Cuisinart Customer Care Line (see "UK After Sales Service").
- Unplug from the mains when not in use and before cleaning. Allow to cool before cleaning the appliance. To disconnect, press the 'On/Off' button, and then remove the plug from the mains. Never pull the plug out of the mains socket by its lead.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Not for use by children. Keep out of reach of children during and after use.
- Do not use any accessory or attachments with this appliance other than those recommended by Cuisinart.
- No repair should be carried out by the user. In case of fault, contact the Cuisinart Helpline, (See "UK After Sales Service" section).
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or unit in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- Do not exceed the maximum capacity of this appliance.

- This appliance should be used only for grinding coffee beans and brewing coffee as described within the Instructions for Use. Please retain these instructions for further use.
- Always ensure that your hands are dry before removing the plug from the mains socket.
- This appliance complies with the requirements of Directives 2004/108/ EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).




CAUTION: Surfaces marked with this symbol are liable to get hot. Please do not touch during use.



WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

Safety During Use

- Do not touch hot surfaces.
- Always fill water reservoir first, then plug into a suitable power outlet. To disconnect push the 'ON/OFF' button to switch off the appliance, then remove the plug from the wall outlet.
- Never open the filter basket holder during the brew cycle; extremely hot water/coffee can spill and cause injury.
- Liquids will reach up to approximately 90°C. Be careful when pouring beverages.
- Avoid contact with moving parts.
- Check grinder basket before use for presence of foreign objects.
- Use the coffee grinder to grind roasted coffee beans only. Do not use to grind other substances, e.g nuts, spices or un-roasted beans as this may damage the blades or cause injury.

CAUTION: Keep hands and other utensils away from grinder blades. Carefully remove grinder when cleaning.

- Do not place cloth or otherwise restrict airflow beneath coffeemaker.
- Use only the Cuisinart Gold Tone® Commercial Style Filter with this unit. These are available to purchase at www.cuisinart.co.uk or by contacting the Cuisinart Helpline (see "UK After Sales Service" section). Other Gold Tone® permanent filters may cause the unit to overflow.

WARNING: Scalding may occur if the lid is removed during the brewing cycle.

UK Wiring Instructions


The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

YELLOW & GREEN = EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L
- The wire which is coloured YELLOW & GREEN must be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 10A fuse.

If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 10A fuse must be fitted.

B. Before first use

Inserting the Water Filter

- Your coffee machine comes with a charcoal water filter that eliminates chlorine, bad tastes and odours from tap water.
- Remove the filter from the polybag and soak it, fully immersed, in cold tap water for 15 minutes.
- Open the lid on the coffee maker by pressing the indentation marked 'PUSH'
- Lift the water filter holder out of the water reservoir.



- Press down on the filter compartment and pull towards you to open.
- Place filter into the holder and snap it closed. Be careful – improper placement can tear the filter skin.
- Flush filter by running cold tap water through holes in bottom of compartment for 10 seconds.
- Allow the filter to drain completely.
- Slide the water filter holder back into the channel in the water reservoir, pushing it down to the base of the unit.

NOTE: We recommend changing the water filter every 60 days or after 60 uses, and more often if you have hard water. Replacement filters can be purchased in stores, or by calling Cuisinart UK After Sales Service or at www.cuisinart.co.uk

Flushing out the Machine

- We recommend flushing out the system before brewing your first cup of coffee. Simply fill a cup with water (max 450ml) and pour into the reservoir. Place the same cup on the drip tray, press the Grind Off button and power on the unit. Do not add coffee.

C. Brewing Coffee Using Beans

- Open the lid by pressing the indentation marked 'PUSH'. Add water by filling your chosen cup with water and pouring this water into the reservoir. This ensures that you have exactly the right amount of water to make your cup of coffee.



N.B All of the water that you put into the reservoir will be used to produce your cup of coffee. Do not fill the water reservoir with more than 450ml of water. You will notice slightly less water comes out into the cup as a small amount is absorbed by the coffee grinds. This allows enough room in the cup to add milk. Should you drink your coffee black, you can fill your cup with water then add an extra splash more into the water reservoir.

- Remove grinder cover by simply holding the transparent plastic lid and pulling it towards you. Add beans using the scoop provided.



CUP	COFFEE
Small Cup	1-2 scoops
Medium Mug/Cup	3-4 scoops
Large Mug/Cup	5-6 scoops

NOTE: Adjust the amount of beans to suit your taste as you get to know your coffee maker and personal preferences. The more beans you add, the stronger your coffee will be. The machine will

use all of the beans you add to the machine each time you make a cup of coffee. Be sure not to over-fill the grinder. Six scoops is the maximum.

- Replace the grinder cover and close the lid.
- Pull out the coffee filter basket compartment by gripping each side of the compartment with one hand whilst holding the machine in place with the other. Pull the compartment and it will slide towards you.



- Remove the filter basket cover and insert the gold-tone filter into place. For easy clean up, insert a number 2 sized paper filter (included) into the gold-tone filter. You can use the machine without the paper filter but this means washing out the gold-tone filter after each use.
- If using the paper filter, make sure it is completely open and touching the side walls and bottom of the basket.
- Replace the filter basket cover and push the coffee filter basket compartment back into the unit until it clicks securely into place.
- Select the drip tray for your chosen mug. If you are using a tall mug or travel cup, use the lower height drip tray. If you are using a small mug or cup, use the higher drip tray. This helps to avoid splashing onto the work surface.



Lower height drip tray



Higher height drip tray

- Place your chosen cup on the selected drip tray.
- Press the Grind & Brew button. A blue indicator around the button will light up and the beans will begin to grind. After this, your coffee will start brewing and will drip slowly into your chosen mug.
- To stop process at any time, press the Grind & Brew button again.

D. Brewing Coffee using Pre-Ground Beans

- Open the lid by pressing the indentation marked 'PUSH'. Add water by filling your chosen cup with water and pouring this water into the reservoir. This ensures that you have exactly the right amount of water to make your cup of coffee.



N.B All of the water that you put into the reservoir will be used to produce your cup of coffee. Do not fill the water reservoir with more than 450ml of water. You will notice slightly less water comes out into the cup as a small amount is absorbed by the coffee grinds. This allows enough room in the cup to add milk. Should you drink your coffee black, you can fill your cup with water then add an extra splash more into the water reservoir.

- Pull out the coffee filter basket compartment by gripping each side of the compartment with one hand whilst holding the machine in place with the other. Pull the compartment and it will slide towards you.



- Remove the filter basket cover and insert the gold-tone filter into place. For easy clean up, insert a number 2 sized paper filter (included) into the gold-tone filter. You can use the machine without the paper filter but this means washing out the gold-tone filter after each use.
- If using the paper filter, make sure it is completely open and touching the side walls and bottom of basket.

- Add your pre-ground coffee to the filter. As a guide:

CUP	COFFEE
Small Cup	1-2 scoops
Medium Mug/Cup	3-4 scoops
Large Mug/Cup	5-6 scoops

NOTE: Adjust the amount of ground coffee to suit your taste as you get to know your coffee maker and personal preferences. The more coffee you add, the stronger your coffee will be. The machine will use all of the ground coffee you add to the machine each time you make a cup of coffee. Be sure not to over-fill the gold tone filter. Six scoops is the maximum.

- Replace the filter basket cover and push the coffee filter basket compartment back into the unit until it clicks securely into place.
- Select the drip tray for your chosen mug. If you are using a tall mug or travel cup, use the lower height drip tray. If you are using a small mug or cup, use the higher drip tray. This helps to avoid splashing onto the work surface.



Lower height drip tray



Higher height drip tray

- Place your chosen cup on the selected drip tray.
- Press Grind Off button; a red indicator around the button will light up to let you know the grind function is off.
- Press the Grind & Brew button. A blue indicator around the button will light up. Your coffee will start brewing and will drip slowly into your chosen mug.
- To stop process at any time, press the Grind & Brew button again.

E. Cleaning and Maintenance

- We recommend cleaning your coffee maker each time you use it. Be sure the unit is OFF and unplugged before cleaning.
- Open the lid and remove the grinder assembly (both the cover and the grind compartment).
- Slide out the filter basket holder and remove filter basket cover, gold tone filter and filter basket.
- All of these parts can be hand-washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher.
- We recommend washing the filter basket holder by hand to protect the brushed stainless steel finish.
- Dry all parts. Do not put any water in the unit once the grinder assembly has been removed.
- Wipe the area under the grinder assembly with a damp cloth. If water gets into the grinder motor, the motor may become damaged and may malfunction.
- Never use rough, abrasive materials or cleansers to clean any part of your coffee maker.
- Do not dry the inside of the water reservoir with a cloth, as lint may remain.

DECALCIFICATION

- Decalcification refers to removing the calcium deposits which form over time on the metal parts of the coffee maker. When both blue and red indicators flash, it is time to clean your coffee maker. We recommend decalcifying every month for best performance. The frequency depends upon the hardness of your tap water and how often you use the coffeemaker.

Directions:

1. Remove the water filter holder and water filter from the water reservoir.
2. Fill the water reservoir to the maximum capacity (450ml) with a mixture of 6 parts white vinegar and 10 parts water.
3. Place a container which is 450ml or bigger under the dispenser.
4. Press and hold both Grind & Brew and Grind Off buttons for 2 seconds to activate the cleaning/decalcification process.

NOTE: Blue and red indicators will alternately flash during the cleaning cycle.

5. Discard solution when flow stops, and return container to coffee maker.
6. Rinse by repeating operation, this time using 450ml of fresh, cold water.

NOTE: One cycle should be sufficient to adequately clean the coffee maker. If there is any smell or taste of vinegar, run another cycle with fresh, cold water.

F. Trouble Shooting

Q: Indicator lights are flashing

A: If both red and blue indicator lights are flashing simultaneously, it is time to clean the coffee maker. See decalcification instructions. If indicator lights are alternately flashing blue and red, your coffeemaker is in the "clean" mode.

Q: Pressed Grind & Brew button, but nothing is happening

A: Check that the outlet you are using has power. The grinder assembly may not be properly in place. Make sure the grinder and cover are properly positioned, lid is fully closed and try again.

Q: Coffeemaker not grinding beans

A: Coffee beans are too tightly packed. Do not fill above Max Fill line.

A: Grind Off is selected. Press the button again to deselect.

Q: Coffee residue appears on lid of grinder

A: This is normal and will occur each time you grind beans. It should not affect coffee flavour when brewing consecutive cups.

Q: Coffee is not strong enough/too strong

A: Each time the coffee maker runs it will use all of the beans/ground coffee added and all of the water. Tastes vary and you should adjust the proportions according to your own preferences. If coffee is too strong either reduce the amount of beans/ground coffee or increase the amount of water. If coffee is too weak, either increase the amount of beans/ground coffee or decrease the amount of water.

Be sure not to fill the grinder with more than six scoops or above the Max Fill line. Do not fill the water reservoir with more than 450ml.

A: If the chute on the coffee grinder is not cleaned, it is possible for it to collect enough residue to inhibit the flow of coffee grinding into the filter basket – this will make your coffee weaker than expected. Be sure to clean the chute portion when cleaning the coffee grinder.

Q: Coffee is dripping after coffee brewing should be complete

A: If you are using a paper filter, it is possible for coffee to continue dripping after the brewing cycle has completed – this is normal.

Q: Where can I buy replacement filter papers

A: The machine uses a standard size 2 filter paper. Once you have used the quantity included in the box, you can purchase more at most leading supermarkets.

Q: Not enough hot water is coming out to fill the cup.

A: Add a full cup and a little splash more. It is normal for some water to be absorbed by the ground coffee.

UK Guarantee

This Cuisinart appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. No responsibility will be accepted for any damage caused in transit. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406 902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

The return address is:
Customer Care Centre
Conair Logistics
Unit 4 Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Version no.: DGB1U IB-15/275A
IB Size: 148mm(W) x 210mm(H)
Die Cut: new
Material: COVER:157gsm B/S gloss artpaper
INSIDE:157gsm B/S gloss artpaper
Coating: waterbase varnishing for whole book
Colors(Cover): 1C+1C(BLACK)
(Inside): 1C+1C(BLACK)
Date: SEP/19/2015 Co-ordinator: Astor You / Jacket Tan
Revise Ver: F DGB1U IB-15/275A (0.0) Operator: liao

 **宝发柯式印刷有限公司**
Tel: 0769-87720314 87886328 Fax: 0769-87720324
E-MAIL: pofatprepress@pofat.com

BLACK

