

Espresso & Coffee Conical Burr Grinder

CBM22 Series

Cuisinart®



Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Important Safeguards

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance.

This appliance should be used only as described within this instruction book. Please keep this instruction book for future reference.

1. Ensure all packaging materials and any promotional labels or stickers are removed from the Burr Mill before first use.
2. Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (see “UK After Sales Service” section).
3. Do not use this appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by a special lead available from the manufacturer or its service agent, see “UK After Sales Service” section.
4. Do not immerse the appliance in water or any liquids.
5. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should always be supervised to ensure that they do not use or play with this product.
7. Keep out of reach of children during and after use.
8. This is an attended appliance. Do not leave unattended during use. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
9. Never pull the plug out of the mains socket by the lead.
10. Do not allow the lead to overhang the kitchen table or worktop.
11. Avoid contact between the lead and hot surfaces.
12. This appliance is for indoor, domestic use only and is not intended to be used in applications such as:

staff kitchen areas in shops, offices and other working environments; farmhouses; by customers in hotels, motels and other residential type environments; bed and breakfast type establishments.

13. Always ensure that your hands are dry before removing the plug from the mains socket.
14. Always ensure the voltage to be used corresponds with the voltage on the appliance, which is indicated on the bottom of the motor unit.
15. Do not use any attachments other than those recommended or sold by Cuisinart.
16. Do not touch moving parts whilst in use.
17. This product complies fully with all appropriate EU and UK legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department (see “U.K. After Sales Service” section).

WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

Save These Instructions For Household Use Only

Contents

Important Safeguards	2
Features and Benefits	4
Getting Started	5
Operating Instructions	5
Cleaning and Maintenance	7
Troubleshooting.	8
Guarantee	10



1. Bean Hopper Lid

2. Bean Hopper

2a. Bean Hopper Release

3. Grind Size dial

4. Start/Stop Button

5. Grinder Outlet

6. Grind Chamber Lid

7. Grind Chamber

8. Removable Tray

9. Conical Burr Mill (not shown)

10. Cup Size/Manual Selector dial

11. Portafilter Holder Accessory

11a. Portafilter Holder Outlet

11b. Portafilter Holder Storage

12. Scoop Brush

Getting Started

Take all the parts out of the box and remove plastic and packaging and wipe clean.

1. Place grind chamber lid on grind chamber and insert into unit.
2. Insert scoop brush into holder on the back of the unit. Your unit is now ready to use.

Operating Instructions

1. Remove bean hopper lid.
2. Fill the bean hopper, and then replace the lid, making sure that the lid closes securely. Maximum capacity is 225g. Be sure you have enough beans to grind your desired amount of coffee.
3. Plug cord into outlet.
4. The light bar above the Start/Stop Button will illuminate and remain solid, indicating the unit is ready for operation. If the light bar above the Start/Stop Button is flashing, the unit is not ready for operation.
Note: The unit will go into standby mode after 30 minutes of no use.
5. To choose the grind setting, rotate the grind size dial. The higher the number, the coarser the grind. Use 1-14 for espresso, 15-25 filter/pour-over, and 26-35 for French press.
6. Use the cup size dial to select the desired number of cups: from 1-14 cups or single or double espresso shot. Take into account that based on personal preference, you can make your coffee stronger or weaker by adjusting cup selection. For a customised amount of grounds, turn the dial to Manual. See the Manual Grind section for specific instructions.

Note: The portafilter holder must be installed for both the Single and Double modes to operate correctly. When the portafilter holder is installed, the Cup Size settings will be disabled and cannot be used until the holder is removed.

7. Place your preferred grounds container under grinder outlet. When using the included grind chamber, make sure the lid tab is open, and slide the into place under the grinder outlet.



When grinding for one or two espresso shots, use the portafilter holder by sliding the accessory into the slot below the grinder outlet, and then secure portafilter in holder, making sure it's below the grinder outlet.

8. Press the Start/Stop button to begin grinding. A safety interlock system prevents the unit from operating unless the hopper is properly in place.



Note: If the grind chamber is overfilled, the chute can get clogged and the unit will not work. To unclog, use the scoop brush to clear out the chute of excess grounds. Should the grinder stop at any point, the motor has likely overheated.

Wait for your grinder to cool off (up to 30 minutes), then resume use.

9. Grinding will automatically stop upon completion.

Note: To cancel operation during use, press the Start/Stop button.

10. Pull the grind chamber or portafilter toward you to remove from unit.

11. After 30 minutes of no use, the unit will go into standby mode and Start/Stop will no longer illuminate. To wake the unit back up, press the Start/Stop one time.

Manual Grind

If you prefer, after selecting your grind setting, you have the option of manually controlling how much coffee the unit will grind. To do so, follow steps 1–5 on previous page. Make sure the cup size dial is turned to Manual, then press and hold the Start/Stop button until the desired amount of coffee has been ground.

NOTE: To avoid overflow when using the Manual feature, the grinder will turn off automatically after approximately 30 seconds.

Grinding Settings

When selecting your grind setting, remember that the higher the number, the coarser the grind. Use 1-14 for espresso (fine), 15-25 for drip/pour-over (medium), and 26-35 for French Press (coarse).


NOTE: If you meet resistance when going from coarse to fine, a bean may be stuck. Re-insert grind chamber or portafilter then simply turn the cup size knob to Manual, and press and hold the Start/Stop button, while turning the grind size knob towards a finer grind.

NOTE: If your unit stops grinding, the chute may be clogged. To unclog, first unplug your grinder and then use the brush with hard bristles on the measuring scoop to clear out the chute of excess grounds.

Cleaning and Maintenance

HOPPER

1. **Unplug unit.**
2. Beans can be removed from the hopper by lifting off the lid and rotating the dial to the “unlock” position. Once unlocked, the hopper can be removed to pour out remaining beans.

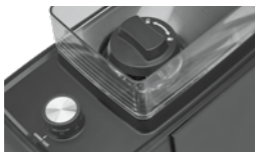


BURR GRINDER

1. If some beans remain in the grinder, put the hopper back on, re-insert the grind chamber, and run a grind cycle for 8 cups on any grind setting. Once finished, you can continue cleaning as instructed.
2. Rotate the grind size dial counterclockwise until dial stops.
3. Unplug unit.
4. Remove the bean hopper lid and turn the lock/unlock dial counterclockwise to release the bean hopper.



NOTE: You will notice the release arrow and arrow on the burr on the inside of unit are now aligned. They must be aligned in order to re-insert the hopper.

- After the bean hopper has been removed, remove the burr grinder by grasping the metal handle and lifting up. Use the brush to remove grounds or wash by hand. Replace the burr grinder on the unit and rotate until the piece is fully inserted. Push handle down, replace, and lock hopper.

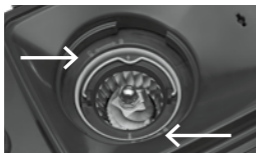

NOTE: The hopper will not attach to the unit if the grinder has not been fully inserted. The brush on the measuring scoop is only for cleaning purposes.

- Wipe body of grinder with a damp cloth.

NOTE: The bean hopper, bean hopper lid, grind chamber, and grind chamber lid can be washed by hand with hot, soapy water. Dry thoroughly.

Maintenance

Any other servicing or maintenance should be performed by an authorised service representative.

Troubleshooting

Problem	Possible causes	Solution
The appliance does not work.	Plug not connected.	Connect the plug.
	The bean hopper is not inserted correctly.	Check that the bean hopper is correctly inserted on the main unit.
	The motor thermal protection is activated.	Wait (approx. 30 minutes) for the thermal protection to reset.
The light bar does not illuminate	In sleep mode because the appliance was not used after 30 minutes.	Press the Start/Stop button once to wake up the appliance.

The light bar blinks continuously	The appliance is not ready for operation.	Check that the cup size dial is set at 1-14 or MAN. If using portafilter holder, check the cup size dial is set to SIN or DBL.
Problem	Possible causes	Solution
The light bar blinks 3 times and then illuminate in solid.	The chute is clogged.	Unplug and clean the chute with the brush on the scoop. Clean the grinder with the grind size dial rotated to 35 before removing the upper part of the grinder.
The light bar blinks continuously during operation.	The motor thermal protection activated automatically because the chute is clogged.	Unplug and clean the chute with the brush on the scoop. Clean the grinder with the grind size dial rotated to 35 before removing the upper part of the grinder and wait 30 minutes for the thermal protection to reset.
The appliance works but no ground coffee comes out.	No coffee beans in the bean hopper.	Load the coffee beans.
	The grinder is blocked.	Remove the grinder and check there are no objects blocking rotation. Clean the grinder with brush on the scoop if needed.
The set grinding level is incorrect or difficult.	The upper part of the grinder is missing.	Insert and secure the upper grinder in its seat.
	If meeting resistance when going from coarse to fine, a bean may be stuck.	Turn the cup size dial to Manual, and press and hold the Start/Stop button while turning the grind size dial towards a finer grind.
	Grinders are worn.	contact customer care

UK Guarantee

Limited Three-Year Guarantee

This appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only i.e. defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

1. The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
2. The appliance has been purchased from an unauthorised stockist*
3. The appliance is used for professional / non domestic usage
4. Repairs or alterations have been attempted by unauthorised persons
5. The failure of the appliance is a direct result of misuse
6. The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling

second hand goods, refurbished products etc.

If you have any queries regarding this guarantee please contact the Conair Customer Care at support@cuisinart.co.uk or **03702 406 902**.

It is important to retain your proof of purchase.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care at support@cuisinart.co.uk or **03702 406 902**.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, swap email and phone around so email is first. Also remove times for phones.

Return address:
Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

www.cuisinart.co.uk



Scan to get started with your coffee machine

IB-25/332A